



INSTALLATION MANUAL

Digital I/O PCB

EKRP1HBAA




4PW54621-1 C 000000M


4PW54621-1C 09.2010

*KHBH/X


1

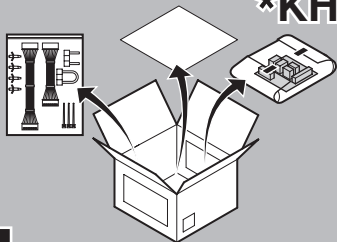


2

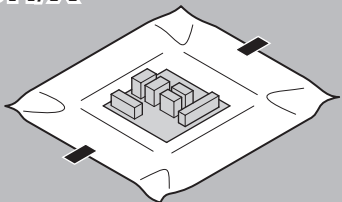


3

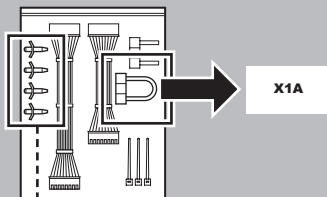


4

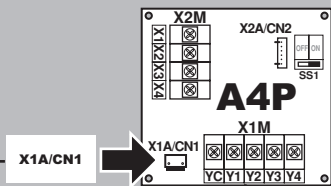


5

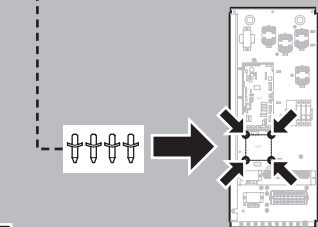

6

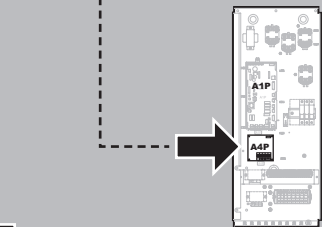








7

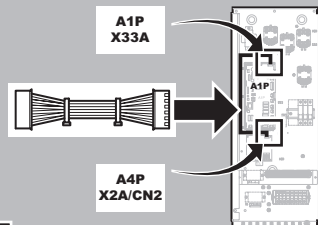

*KHBH/X

EKRP1HBAA Digital I/O PCB
Installation manual 4PW54621-1C


*(D/B)(H/L)

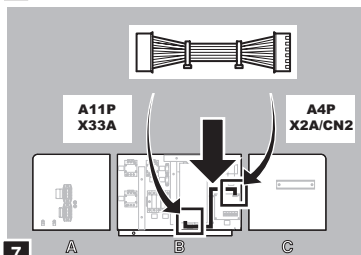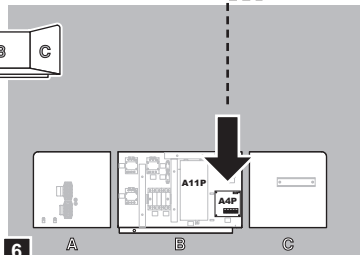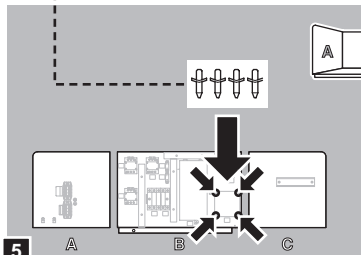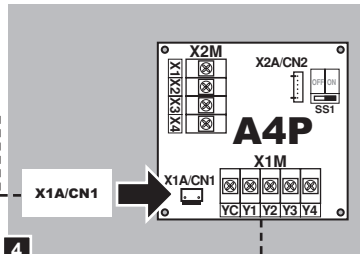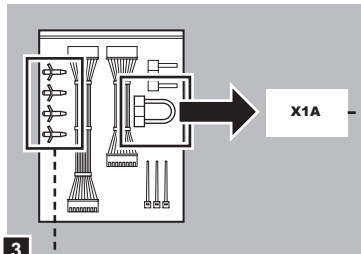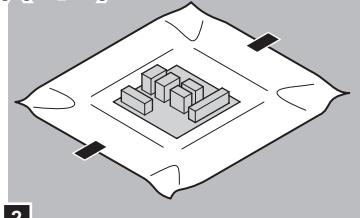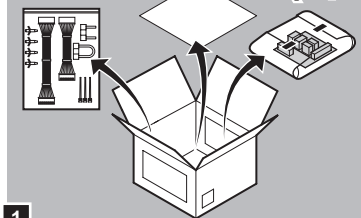


EKRP1HBAA Digital I/O PCB
Installation manual 4PW54621-1C

EKHVH/X


1

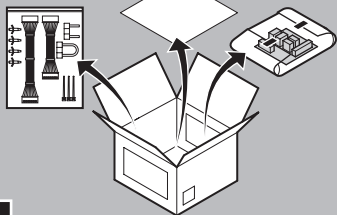


2

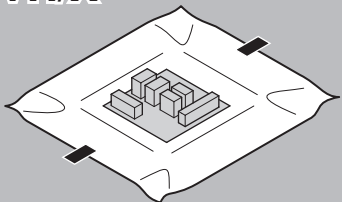


3

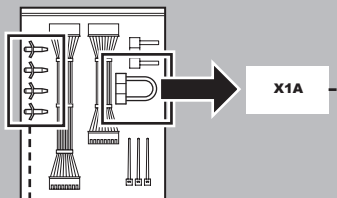


4

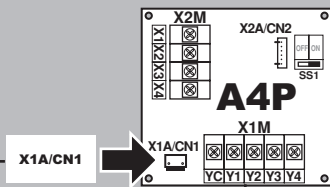


5

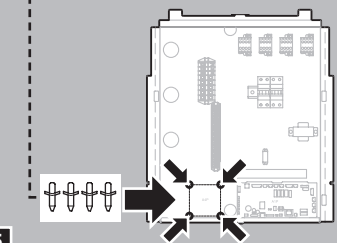

6

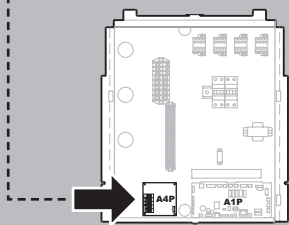


7

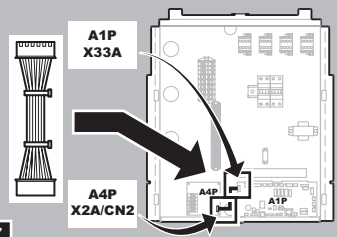


EKRP1HBAA Digital I/O PCB
Installation manual 4PW54621-1C

EBHQ+EKCBH/X


1

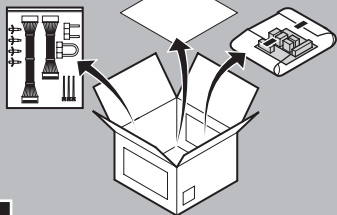


2

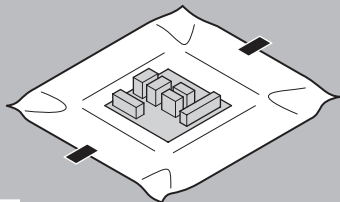


3

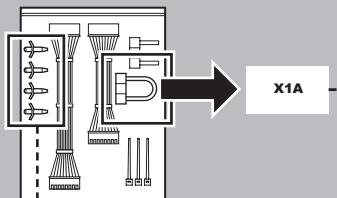


4

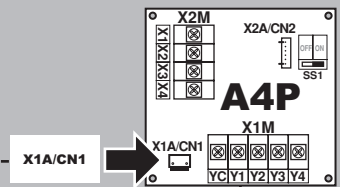


5

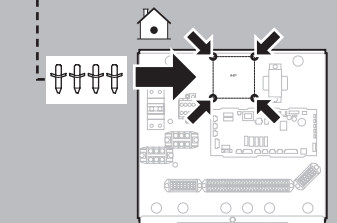

6






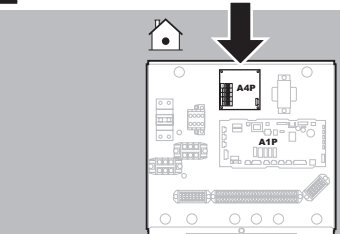


7

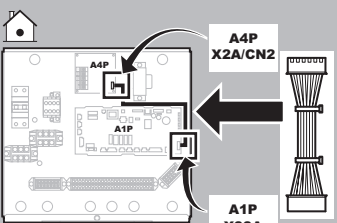







EKRP1HBAA Digital I/O PCB
Installation manual 4PW54621-1C

*KHBRD*AA

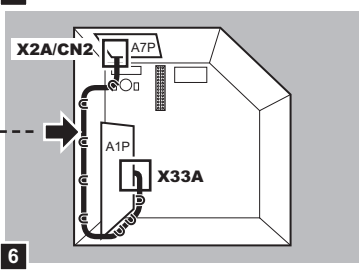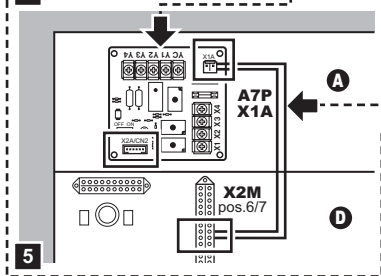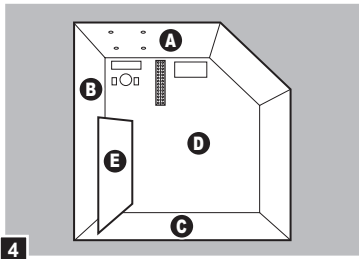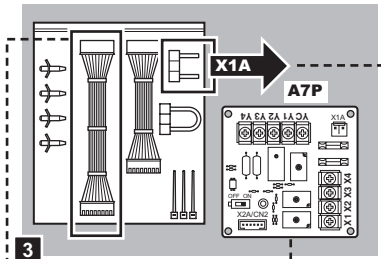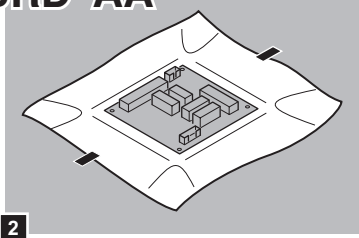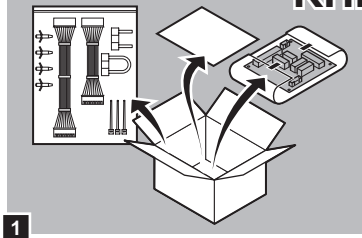







EKRP1HBAA Digital I/O PCB
Installation manual 4PW54621-1C

*KHBRD*ABV1

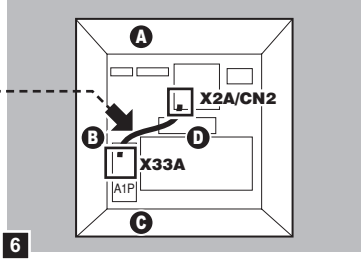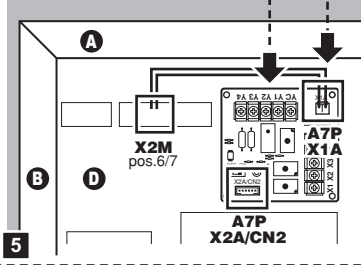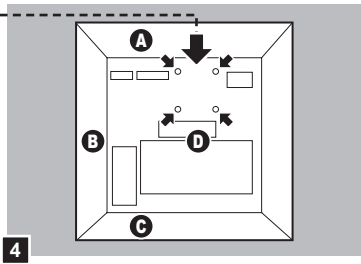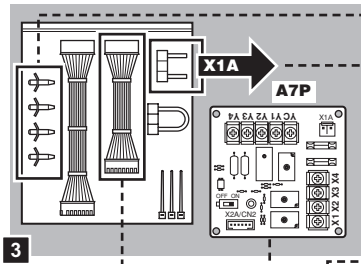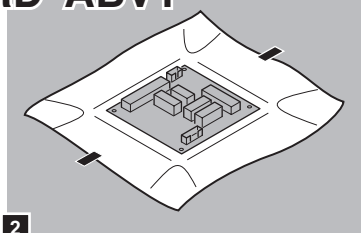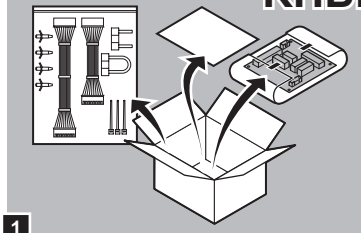







EKRP1HBAA Digital I/O PCB
 Installation manual 4PW54621-1C

*KHDRD*ABY1

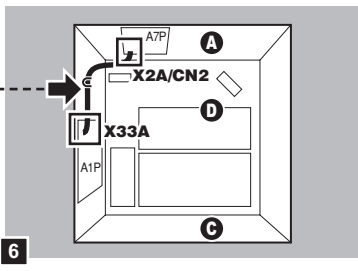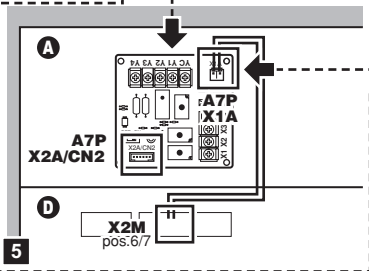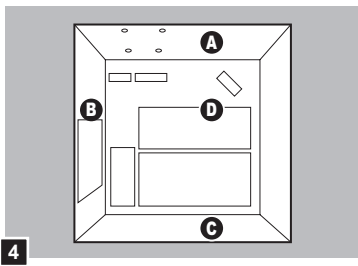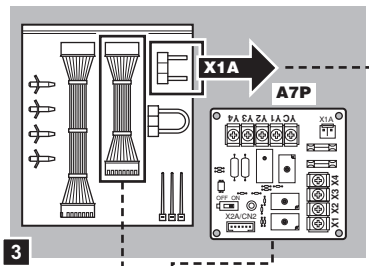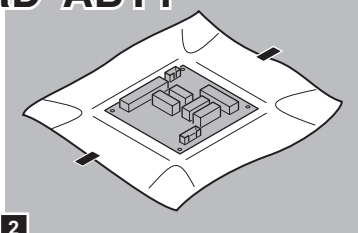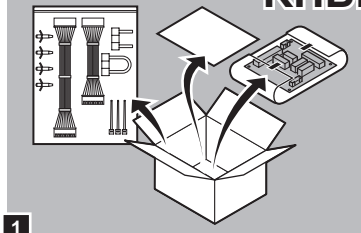


EKRP1HBAA Digital I/O PCB
Installation manual 4PW54621-1C

EKHVM*

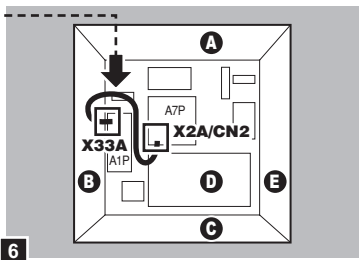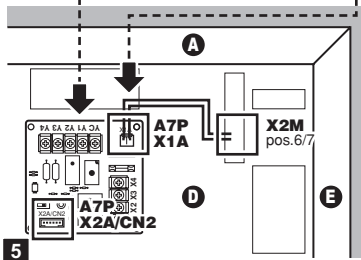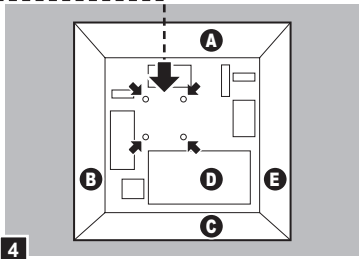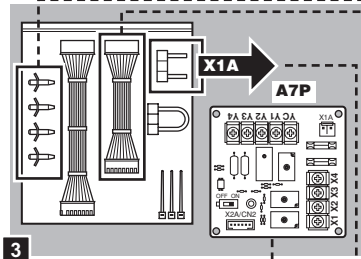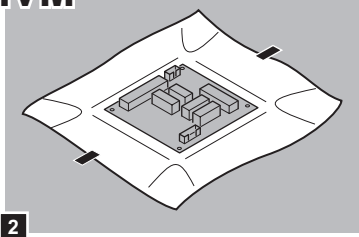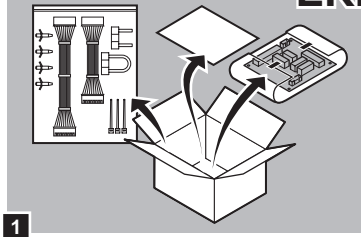


EKRP1HBAA Digital I/O PCB
 Installation manual 4PW54621-1C

NOTES

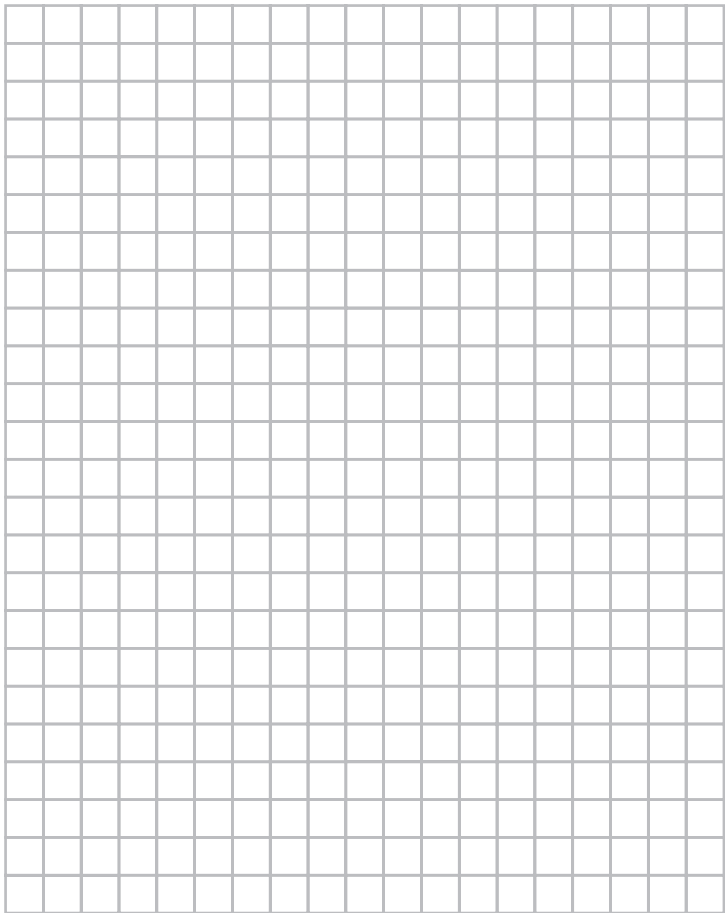

NOTES

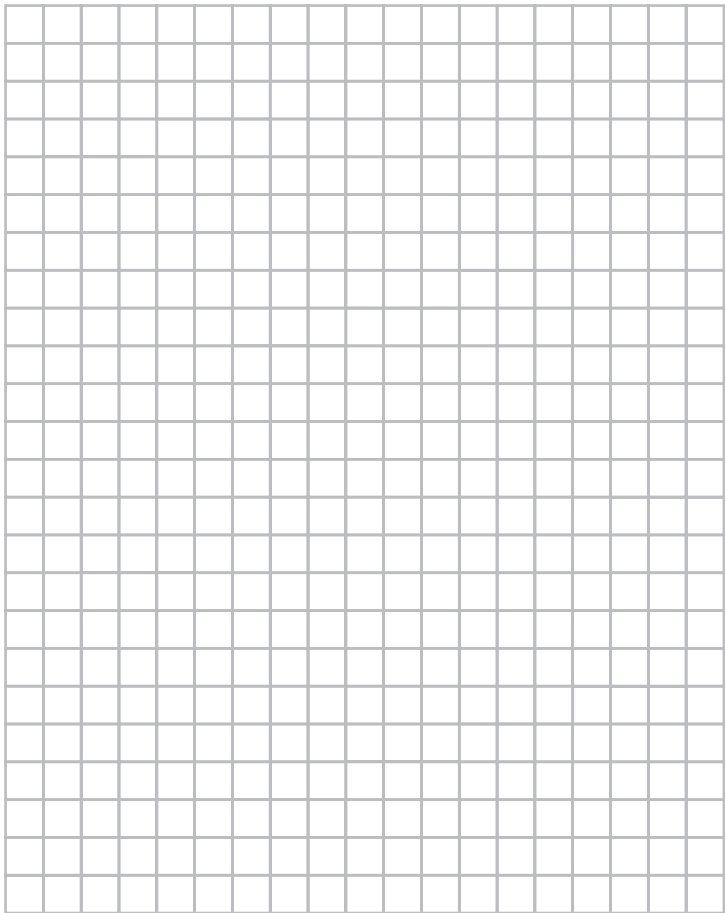

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium