





INSTALLATION MANUAL

Inverter condensing unit


ERQ100A7V1B
ERQ125A7V1B
ERQ140A7V1B

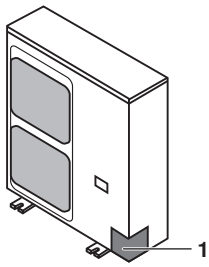



1

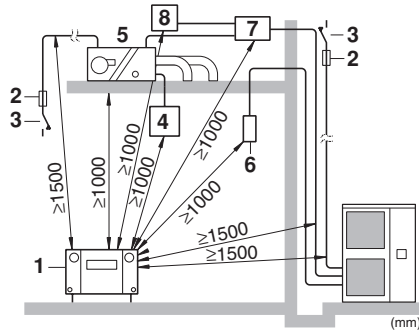

2

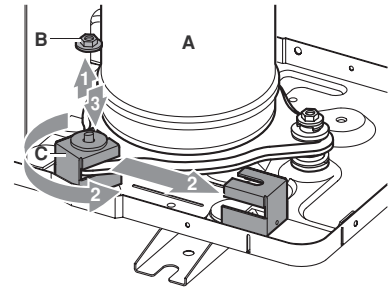


3

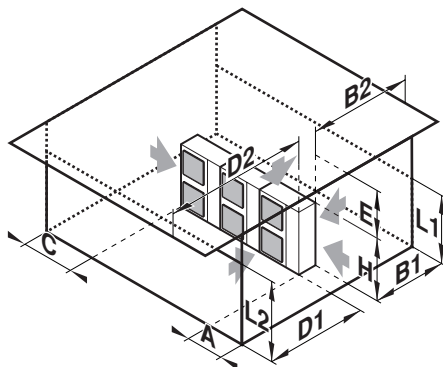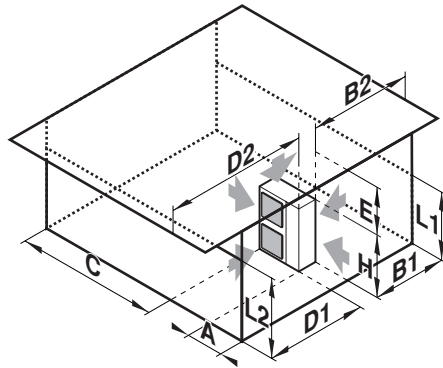


	↖	↗	↘	↙	↕	A	B1	B2	C	D1	D2	E	L1/L2	
✓							≥100							
✓			✓	✓		≥100	≥100		≥100					
✓					✓		≥100				≤500	≥1000		
✓			✓	✓	✓	≥150	≥150		≥150		≤500	≥1000		
	✓										≥500			
	✓				✓						≥500	≥1000		
✓	✓					L2>H	≥100			≥500				3
						L2<H	≥100			≥500				
						L2>H	L1≤H	≥250	≤500	≥750		≥1000	0<L1≤1/2 H	1
							H<L1			L1≤H		≥1000	1/2 H<L1≤H	
✓	✓				✓	L2<H	L2≤H	≥100			≥1000	≤500	≥1000	0<L2≤1/2 H
							H<L2	≥200					1/2 H<L2≤H	3
										L2≤H				
✓			✓	✓			≥200	≥300		≥1000				
✓			✓	✓	✓		≥200	≥300		≥1000		≤500	≥1000	
	✓									≥1000				
	✓				✓				≤500	≥1000		≥1000		
						L2>H	≥300			≥1000				3
✓	✓					L2<H	≥250			≥1500			0<L2≤1/2 H	
							≥300						1/2 H<L2≤H	
						L2>H	L1≤H	≥300	≤500	≥1000		≥1000	0<L1≤1/2 H	1+2
							H<L1			L1≤H		≥1250	1/2 H<L1≤H	
✓	✓				✓	L2<H	L2≤H	≥250			≥1500	≤500	≥1000	0<L2≤1/2 H
							H<L2	≥300					1/2 H<L2≤H	3
										L2≤H				


4

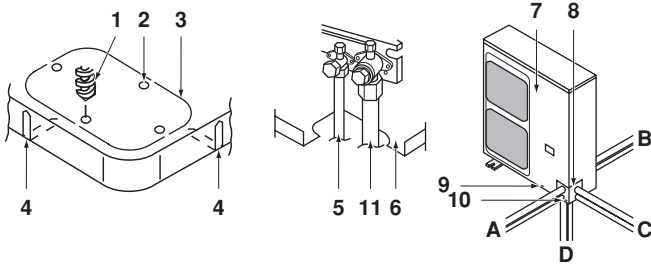

5

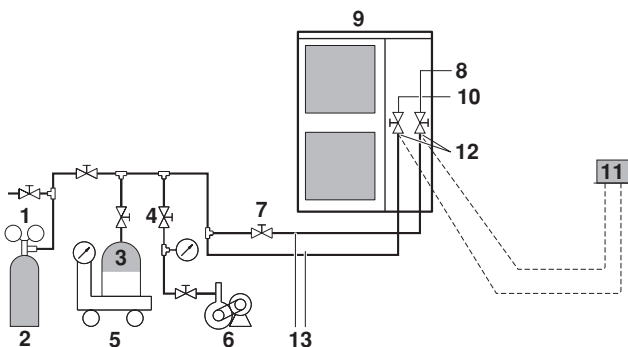

6

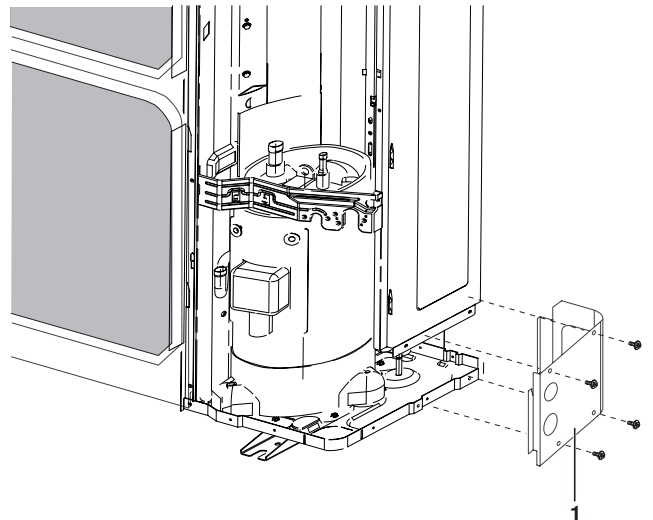

7

CE - DECLARATION-OF-CONFORMITY
CE - KONFORMITÄTSERKLÄRUNG
CE - DECLARATION-DE-CONFORMITE
CE - CONFORMITEITS/VERKLARING

CE - DECLARACION-DE-CONFORMIDAD
CE - DICHIARAZIONE-DE-CONFORMITA
CE - ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ

CE - DECLARAÇÃO-DE-CONFORMIDADE
CE - ЗАЯВЛЕНИЕ-О-СООТВЕТСТВИИ
CE - ÖPFEYSELSESKLÆRING
CE - FÖRSÄKRAN-OM-ÖVERENSSTÄMMELSE

CE - ERKLÆRING OM-SAMSVAR
CE - ILMOITUS-YHDENMUKAISUDESTA
CE - DEKLARACJA-ZGODNOSCI
CE - DECLARAȚIE-DE-CONFORMITATE

CE - IZJAVA-O-USKLADNOSTI
CE - MEGFELELŐSÉG-NYILATKOZAT
CE - DEKLARACJA-ZGODNOSCI
CE - DECLARAȚIE-DE-CONFORMITATE

CE - IZJAVA O SKLADNOSTI
CE - VASTAVUSEDEKLARACIJA
CE - DEKLARACIJA-ZA-CЪOTBETCTBIE
CE - UYUMLUKULUK-BILDIRISI

CE - ATTIKITES-DEKLARACIJA
CE - ATBLISTBAS-DEKLARACIJA
CE - VYHLASENIE-ZHODY
CE - UYUMLUKULUK-BILDIRISI

Daikin Europe N.V.

- 01 **ⒺⓈ** declares under its sole responsibility that the air conditioning models to which this declaration relates:
- 02 **Ⓔ** erklärt auf seine alleinige Verantwortung daß die Modelle der Klimaanlage für die diese Erklärung bestimmt ist:
- 03 **Ⓔ** déclare sous sa seule responsabilité que les appareils d'air conditionné visés par la présente déclaration:
- 04 **Ⓔ** verklaart hierbij op eigen exclusieve verantwoordelijkheid dat de airconditioning units waarop deze verklaring betrekking heeft:
- 05 **Ⓔ** declara bajo su única responsabilidad que los modelos de aire acondicionado a los cuales hace referencia la declaración:
- 06 **Ⓔ** dichiara sotto sua responsabilità che i condizionatori modello a cui è riferita questa dichiarazione:
- 07 **Ⓔ** δηλώνει με αποκλειστική της ευθύνη ότι το προϊόν των κλιματιστικών ονομαζών στο οποίο αναφέρεται η παρούσα δήλωση:
- 08 **Ⓔ** declara sob sua exclusiva responsabilidade que os modelos de ar condicionado a que esta declaração se refere:

ERQ100A7V1B*, ERQ125A7V1B*, ERQ140A7V1B*,

* = . 1, 2, 3, ..., 9

- 01 are in conformity with the following standard(s) or other normative document(s), provided that these are used in accordance with our instructions:
- 02 der/den folgenden Norm(en) oder einem anderen Normdokument oder Dokumenten entspricht/entsprechen, unter der Voraussetzung, daß sie gemäß unseren Anweisungen eingesetzt werden:
- 03 se conformes à aux normes (s) ou autre(s) document(s) normatif(s), pour autant qu'ils soient utilisés conformément à nos instructions:
- 04 conform de volgende norm(en) of één of meer andere bindende documenten zijn, op voorwaarde dat ze worden gebruikt overeenkomstig onze instructies:
- 05 están en conformidad con las siguientes norma(s) u otro(s) documento(s) normativo(s), siempre que sean utilizados de acuerdo con nuestras instrucciones:
- 06 sono conformi all(i) seguente(i) standard(i) o altro(i) documento(i) a carattere normativo, a patto che vengano usati in conformità alle nostre istruzioni:
- 07 είναι σύμφωνα με το(ι) ακόλουθο(ι) πρότυπο(ι) ή άλλο(ι) έγγραφο(ι) κανονιστικό, υπό την προϋπόθεση ότι χρησιμοποιείται σύμφωνα με τις οδηγίες μας:
- 08 EN60335-2-40,
- 09 following the provisions of:
- 10 gemäß den Vorschriften der:
- 11 enligt villkoren i:
- 12 gilt i henhold til bestemmelserne i:
- 13 noudataren määratakse ja:
- 14 overeenkomstig de bepalingen van:
- 15 seguindo as disposições de:
- 16 secondo le prescrizioni per:
- 17 je priporočeni tuki, določeni v:
- 18 in urma prevederilor:
- 19 ob upoštevanju določb:
- 20 vstihavati nariadenie:
- 21 cenebaakku kazyarata va:
- 22 lakants nuuslat, peltikiam:
- 23 leevogot prastbas, kas toetabas:
- 24 orđzarjav uslanovnia:
- 25 bunun kagullama uygun olarak:
- 06 Nota *
- 07 Znakovon *
- 08 Nota *
- 09 Примечание *
- 10 Bemerk *

- 09 **Ⓔ** заявляет, исключивъ entirely под свою ответственность, что модели кондиционеров воздуха, к которым относится настоящее заявление:
- 10 **Ⓔ** erklærer under enansvar, at klimaanlægsmodellerne, som denne deklaration vedrører:
- 11 **Ⓔ** déklarer i egenkap av hvarsinnsvang, at luftkonditioneringsmodellerna som berörs av denna deklaration innebär att:
- 12 **Ⓔ** erklærer i fuldstændig ansvar for at de luftkondisneringsmodeller som berøres af denne deklaration innebærer at:
- 13 **Ⓔ** ilmoittaa yksinomaan omalla vastuullaan, että läänin iloniluksen tarkoitamat ilmastointilaitteiden mallit:
- 14 **Ⓔ** prohlásuje ve své plné odpovědnosti, že modely klimatizace, k nimž se toto prohlášení vztahuje:
- 15 **Ⓔ** izjavlja pod skljupko vlastitom odgovornosti da su modeli klima uređaja na koje se ova izjava odnosi:
- 16 **Ⓔ** teljes felelősség tudatában kijelenti, hogy a klímaberendezés modellek, melyekre e nyilatkozat vonatkozik:

- 17 **Ⓔ** deklaruje na własną, wyłączną odpowiedzialność, że modele klimatyzatorów, których dotyczy niniejsza deklaracja:
- 18 **Ⓔ** deklari på propne išpandere da aparatele de aer condiționat la care se referă această declarație:
- 19 **Ⓔ** z viso odgovornostjo izjavja, da so modeli klimatskih naprav, na katere se izjava nanaša:
- 20 **Ⓔ** kinnitab oma täieliku vastutuse, et käesoleva deklaratsiooni alla kuuluvad klimateadmetele mudelid:
- 21 **Ⓔ** deklariira na oma otsevastutuse, et koedmetele klimateadmetele mudelid, kelleks on etteantud see deklaratsioon:
- 22 **Ⓔ** vieste savo atsakomybę skelbia, kad oro kondicionavimo prietaisų modeliai, kuriems yra taikoma ši deklaracija:
- 23 **Ⓔ** ar plinu atbildību apliecinu, ka šāds uzskaitito modeļu gaisa kondicionēlāji, uz kuriem attiecas šī deklarācija:
- 24 **Ⓔ** vyhlásuje na vlastní zodpovednosť, že tieto klimatizačné modely, na ktoré sa vzťahuje toto vyhlásenie:
- 25 **Ⓔ** lanamen kendi sorumluluğunda otnak üzere bu bildirimi ilgili otdugu klima modellerini asgıdaki gibi otdugu beyan eder:

- 16 megjelölnek az alábbi szabvány(ok)nak vagy egyéb irányadó dokumentum(ok)nak, ha azokat előírás szerint használják:
- 17 megfelel a következő normák vagy egyéb dokumentumok normalizációs, vagy normákhoz, ha azokat az esetek sá felelősséget vállalják:
- 18 sunt în conformitate cu următorul (următoarele) standard(e) sau alte (documente) normative), cu condiția ca acestea să fie utilizate în conformitate cu instrucțiunile noastre:
- 19 sindet skilnede standarder i de andre dokumenter, under forudsætning af, at disse anvendes i henhold til vores instruktioner:
- 20 on vastavusse järgmist(ie) standard(ite)ga või teiste normatiivsete dokumentidega, kui need kasutatakse vastavalt meie juhendile:
- 21 съответстват на следните стандарти или други нормативни документи, при условие, че са използват съгласно нашите инструкции:
- 22 atitinka žemiau nurodytus standartus ir (arba) kitus norminius dokumentus su sąlyga, kad yra naudojami pagal mūsų nurodymus:
- 23 tad, ja leiboti atbilstoš(ie) standart(ie) norādījumiem, abtās sakojšiem standartiem un citiem normatīviem dokumentiem:
- 24 sú v zhode s nasledovnými (normami) alebo inými (normatívnymi) dokumentami), za predpoklad, že sa používajú v súlade s našimi návodmi:
- 25 întrucît, înaintarea la gre folosimasi kosulă la așăgădăci standartlar ve norm belirlen belgelele uyumludur:

- 01 Directives, as amended.
- 02 Direktiven, gentå Änderung.
- 03 Directives, telles que modifiées.
- 04 Richtlijnen, zoals gewijzigd.
- 05 Directivas, según lo emendado.
- 06 Directive, come da modifica.
- 07 Önyvűk, öntek, éyov, pontonon-éti.
- 08 Directivas, conforme alterações em.
- 09 Директиве со всеми поправками.
- 10 Direktive, med senere ændringer.
- 11 Direktiv, med förändring ändringar.
- 12 Direktiv, med brøttede ændringer.
- 13 Direktivej, setasina kun le ova muetelaina.
- 14 platenen zneni.
- 15 Snemnice, kako je izmijenjeno.
- 16 řányvek) és módosítások rendelkezéseit.
- 17 z pöznejšimi popravkami.
- 18 Direktivelor, cu amendamentele respective.
- 19 Direktive z vsemi spremembami.
- 20 Direktivd koos muudatustega.
- 21 Direktiven, с тварие изменения.
- 22 Direktivos su papildymais.
- 23 Direktivas un to papildījumos.
- 24 Snemnice, v platonim zneni.
- 25 Degistinišis haleriye Yonetmeliker.

- 11 Information * enligi <A> och godkants av enligi Certifikatet <C>.
- 12 Merk * som det fremkommer i <A> og gennem positiv bemeldelse av ifølge Serifikat <C>.
- 13 Huom * joiden os esitely isäkirjassa <A> ja joka on hyväksynyt Serifikatissa <C> mukaisesti.
- 14 Poznámka * jak bylo uvedeno v <A> a pozitivně zjišeno v souladu s osvědčením <C>.
- 15 Napomena * kako je izloženo u <A> pozitivno odobreno od strane prema Certifikatu <C>.
- 16 Megjegyzás * a(z) <A> alapján a(z) igazolta a megjelölt, a(z) <C> tanúsítvány szerint.
- 17 Uwaga * zgodnie z dokumentacją <A> pozytywną opinią udzielił Świadectwem <C>.
- 18 Noia * aga cum este stabilit în <A> și aprobat pozitiv de în conformitate cu Certificatul <C>.
- 19 Opomba * koji je dobio v <A> a pozitivno zjišeno v skladu s certifikatom <C>.
- 20 Märkus * ragu on näidatud dokumentis <A> ja heaks kiidetud järgi vastavalt sertifikaadile <C>.

- 21 Забелешка * частно е изложено в <A> и одобрено потврдето от согласно Сертификата <C>.
- 22 Pastaba * kap nusiayta <A> ir kap bēlajama nusiayta pagal Serifikatā <C>.
- 23 Pezīmes * kā norādīts <A> un atbilstoš pozitīvajam vērtējumam saskaņā ar sertifikātu <C>.
- 24 Poznámka * ako bolo uvedeno v <A> a pozitívne zistené v súlade s osvedčením <C>.
- 25 Not * <A> da beiridigi gbi, ve <C> Serifikasina gře tsarindan otmu olarak degendindidigi gbi.

<A>	DAIKIN.TCF.024D12/02-2009
	TÜV (NB1856)
<C>	0510260101



Jiro Tomita
Director Quality Assurance
Ostend, 4th of May 2009

[Signature]

CONTENTS

	Page
1. Safety considerations	1
2. Introduction	2
2.1. Combination	2
2.2. Standard supplied accessories	3
2.3. Technical and electrical specifications	3
3. Before installation	3
3.1. Precautions for R410A	3
3.2. Installation	3
3.3. Handling	3
4. Selecting installation site	3
5. Precautions on installation	4
5.1. Installation method for prevention of falling over	5
5.2. Method for removing transportation stay	5
5.3. Method for installing drain piping	5
6. Installation servicing space	5
7. Refrigerant pipe size and allowable pipe length	6
7.1. Selection of piping material	6
8. Precautions on refrigerant piping	6
8.1. Cautions for brazing	7
8.2. Cautions for flare connection	7
9. Refrigerant piping	7
9.1. Preventing foreign objects from entering	8
9.2. Cautions for handling stop valve	8
9.3. How to use the stop valve	8
9.4. Cautions for handling the valve cover	8
9.5. Cautions for handling service port	8
9.6. Precautions when connecting field piping and regarding insulation	9
9.7. Leak test and vacuum drying	9
10. Additional refrigerant charge	9
10.1. Important information regarding the refrigerant used	10
10.2. 2 procedures for adding refrigerant	11
11. Electrical wiring work	11
11.1. Internal wiring – Parts table	11
11.2. Precautions on electrical wiring work	12
11.3. Connection example of total system wiring	13
11.4. Connecting power wire and transmission wires	13
11.5. Power circuit and cable requirements	13
12. Before operation	15
12.1. Service precautions	15
12.2. Checks before initial start-up	15
12.3. Field setting	15
12.4. Test operation	17
12.5. Checks in normal operation	18
12.6. Temperature adjustment operation confirmation	18
13. Service mode operation	18
14. Caution for refrigerant leaks	19
14.1. Introduction	19
14.2. Maximum concentration level	19
14.3. Procedure for checking maximum concentration	19
15. Disposal requirements	19



READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION. KEEP THIS MANUAL IN A HANDY PLACE FOR FUTURE REFERENCE.

IMPROPER INSTALLATION OR ATTACHMENT OF EQUIPMENT OR ACCESSORIES COULD RESULT IN ELECTRIC SHOCK, SHORT-CIRCUIT, LEAKS, FIRE OR OTHER DAMAGE TO THE EQUIPMENT. BE SURE ONLY TO USE ACCESSORIES MADE BY DAIKIN WHICH ARE SPECIFICALLY DESIGNED FOR USE WITH THE EQUIPMENT AND HAVE THEM INSTALLED BY A PROFESSIONAL.

DAIKIN EQUIPMENT IS DESIGNED FOR COMFORT APPLICATIONS. FOR USE IN OTHER APPLICATIONS, PLEASE CONTACT YOUR LOCAL DAIKIN DEALER.

IF UNSURE OF INSTALLATION PROCEDURES OR USE, ALWAYS CONTACT YOUR DEALER FOR ADVICE AND INFORMATION.

THIS AIR CONDITIONER COMES UNDER THE TERM "APPLIANCES NOT ACCESSIBLE TO THE GENERAL PUBLIC".

The English text is the original instruction. Other languages are translations of the original instructions.

1. SAFETY CONSIDERATIONS

The precautions listed here are divided into the following two types. Both cover very important topics, so be sure to follow them carefully.



WARNING

If the warning is not observed, it may cause serious casualties.

CAUTION


If the caution is not observed, it may cause injury or damage to the equipment.

Warning

- Ask your dealer or qualified personnel to carry out installation work. Do not install the machine by yourself.
Improper installation may result in water leakage, electric shocks or fire.
- Perform installation work in accordance with this installation manual.
Improper installation may lead to water leakage, electric shocks or fire.
- When a unit is installed in a small room, it is necessary to take measures so that the leaked refrigerant amount does not exceed the limit even if it leaks. As for the measures to prevent the leak from not exceeding the limit, please consult with your distributor.
If the leaked amount exceeds the limit, it may cause an oxygen deficiency accident.
- Be sure to use only the specified accessories and parts for installation work.
Failure to use the specified parts may result in water leakage, electric shocks, fire, or the unit falling.
- Install the air conditioner on a foundation that can withstand its weight.
Insufficient strength may result in the fall of equipment and causing injury.
- Carry out the specified installation work in consideration of strong winds, typhoons, or earthquakes.
Improper installation work may result in accidents due to fall of equipment.

- Make certain that all electrical work is carried out by qualified personnel according to the local laws and regulations and this installation manual, using a separate circuit.
Insufficient capacity of the power supply circuit or improper electrical construction may lead to electric shocks or fire.
- Make sure that all wiring is secure, using the specified wires and ensuring that external forces do not act on the terminal connections or wires.
Incomplete connection or fixing may cause a fire.
- When wiring between the air handling units and control box, and wiring the power supply, form the wires so that the frontside panel can be securely fastened.
If the frontside panel is not in place, overheat of the terminals, electric shocks or a fire may be caused.
- If refrigerant gas leaks during installation work, ventilate the area immediately.
Toxic gas may be produced if refrigerant gas comes into contact with fire.
- After completing the installation work, check to make sure that there is no leakage of refrigerant gas.
Toxic gas may be produced if refrigerant gas leaks into the room and comes into contact with a source of fire, such as a fan heater, stove or cooker.
- Before touching electric terminal parts, turn off power switch.

Caution

- Ground the air conditioner.
Grounding resistance should be according to national regulations
Do not connect the earth wire to gas or water pipes, lightning conductor or telephone earth wire.
Incomplete grounding may cause electric shocks. 
- Gas pipe.
Ignition or explosion may occur if the gas leaks.
- Water pipe.
Hard vinyl tubes are not effective grounds.
- Lightning conductor or telephone ground wire.
Electric potential may rise abnormally if struck by a lightning bolt.
- Be sure to install an earth leakage breaker.
Failure to install an earth leakage breaker may cause electric shocks or fire.
- Install drain piping according to this installation manual to ensure good drainage, and insulate the pipe to prevent condensation.
Improper drain piping may cause water leakage, and make the furniture get wet.
- Install the air handling and outdoor units, power wire and connecting wire at least 1 meter away from televisions or radios to prevent image interference or noise.
(Depending on the radio waves, a distance of 1 meter may not be sufficient to eliminate the noise.)
- Do not rinse the outdoor unit.
This may cause electric shocks or fire.
- Do not install the air conditioner in places such as the following:
 - Where there is mist of mineral oil, oil spray or vapour for example a kitchen.
Plastic parts may deteriorate, and cause them to fall out or water to leak.
 - Where corrosive gas, such as sulfurous acid gas, is produced.
Corrosion of copper pipes or soldered parts may cause the refrigerant to leak.
 - Where there is machinery which emits electromagnetic waves.
Electromagnetic waves may disturb the control system, and cause malfunction of the equipment.

- Where flammable gases may leak, where carbon fiber or ignitable dust is suspended in the air or where volatile flammables, such as thinner or gasoline, are handled.
Such gases may cause a fire.
- Where the air contains high levels of salt such as that near the ocean.
- Where voltage fluctuates a lot, such as that in factories.
- In vehicles or vessels.
- Where acidic or alkaline vapour is present.
- Do not touch any refrigerant which has leaked out of refrigerant piping connections.
This may result in frostbite.
- Do NOT connect the system to DIII-net devices:
 - **Intelligent^{touch}Controller**
 - **IntelligentManager**
 - **DMS-IF**
 - **BACnet Gateway**
 - ...

This could result in malfunction or breakdown of the total system.







2. INTRODUCTION

2.1. Combination

The air handling units can be installed in the following range.

- Always use appropriate air handling units compatible with R410A.
To learn which models of air handling units are compatible with R410A, refer to the product catalogs.
- The manufacturer of this outdoor unit has limited responsibility for total capacity of the system because performance is determined by the total system. The discharge air may fluctuate depending on selected air handling unit and depending on the installation configuration.
- Both air handling unit and digital controller software and hardware are field supply and are to be selected by the installer. Refer to the manual "Option kit for combination of Daikin condensing units with field supplied evaporators" for more details.
Recommended temperature setting on the field supplied controller is between 16°C and 25°C.

2.2. Standard supplied accessories

Gas line piping (1)(*) + copper gasket	1	
Gas line piping (2)(*)	1	
Gas line piping (3)(*)	1	
Installation manual Operation manual	1 1	
Fluorinated greenhouse gases label	1	
Multilingual fluorinated greenhouse gases label	1	

(*) Only for ERQ140.

Location of accessories: refer to [figure 1](#).

1 Accessories

2.3. Technical and electrical specifications

Refer to the Engineering Data Book for the complete list of specifications.

3. BEFORE INSTALLATION



Since design pressure is 4.0 MPa or 40 bar, pipes of larger wall thickness may be required. Refer to paragraph "7.1. Selection of piping material" on page 6.

3.1. Precautions for R410A


- The refrigerant requires strict cautions for keeping the system clean, dry and tight.
 - Clean and dry
 Foreign materials (including mineral oils or moisture) should be prevented from getting mixed into the system.
 - Tight
 Read "8. Precautions on refrigerant piping" on page 6 carefully and follow these procedures correctly.
- Since R410A is a mixed refrigerant, the required additional refrigerant must be charged in its liquid state. (If the refrigerant is in state of gas, its composition changes and the system will not work properly).
- The connected air handling units must be air handling units designed exclusively for R410A.

3.2. Installation

- For installation of the air handling unit(s), refer to the air handling unit installation manual.
- Never operate the air conditioner with the discharge pipe thermistor (R2T), suction pipe thermistor (R3T) and pressure sensors (S1NPH, S1NPL) removed. Such operation may burn out the compressor.
- Be sure to confirm the model name and the serial no. of the outer (front) plates when attaching/detaching the plates to avoid mistakes.
- When closing the service panels, take care that the tightening torque does not exceed 4.1 N·m.

3.3. Handling

As shown in the figure, bring the unit slowly by grabbing the left and right grips.

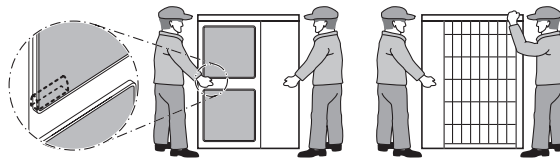

Place your hands on the corner instead of holding the suction inlet on the side of the casing, otherwise the casing could be deformed.



Take care not to let hands or objects come in contact with rear fins.

4. SELECTING INSTALLATION SITE

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.



- Make sure to provide for adequate measures in order to prevent that the outdoor unit be used as a shelter by small animals.
- Small animals making contact with electrical parts can cause malfunctions, smoke or fire. Please instruct the customer to keep the area around the unit clean.


- 1 Select an installation site where the following conditions are satisfied and that meets with your customer's approval.
 - Places which are well-ventilated.
 - Places where the unit does not bother next-door neighbours.
 - Safe places which can withstand the unit's weight and vibration and where the unit can be installed level.
 - Places where there is no possibility of flammable gas or product leak.
 - Places where servicing space can be well ensured.
 - Places where the air handling and outdoor units' piping and wiring lengths come within the allowable ranges.
 - Places where water leaking from the unit cannot cause damage to the location (e.g. in case of a blocked drain pipe).
 - Places where the rain can be avoided as much as possible.
- 2 When installing the unit in a place exposed to strong wind, pay special attention to the following.

Strong winds of 5 m/sec or more blowing against the outdoor unit's air outlet causes short circuit (suction of discharge air), and this may have the following consequences:

 - Deterioration of the operational capacity.
 - Frequent frost acceleration in heating operation.
 - Disruption of operation due to rise of high pressure.
 - When a strong wind blows continuously on the face of the unit, the fan can start rotating very fast until it breaks.

Refer to the figures for installation of this unit in a place where the wind direction can be foreseen.


- Turn the air outlet side toward the building's wall, fence or screen.

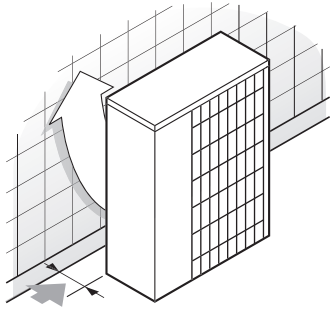


➡ Make sure there is enough room to do the installation

- Set the outlet side at a right angle to the direction of the wind.

Strong wind

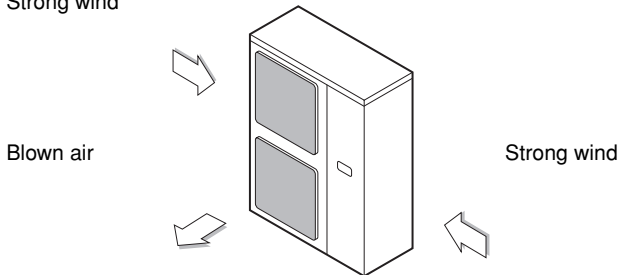

- 3 Prepare a water drainage channel around the foundation, to drain waste water from around the unit.
- 4 If the water drainage of the unit is not easy, please build up the unit on a foundation of concrete blocks, etc. (the height of the foundation should be maximum 150 mm).
- 5 If you install the unit on a frame, please install a waterproof plate within 150 mm of the underside of the unit in order to prevent the invasion of water from the lower direction.
- 6 When installing the unit in a place frequently exposed to snow, pay special attention to the following:
 - Elevate the foundation as high as possible.
 - Construct a large canopy (field supply).
 - Remove the rear suction grille to prevent snow from accumulating on the rear fins.
- 7 The outdoor unit may short circuit depending on its environment, so use the louvers (field supply).
- 8 Do not install or operate the unit on locations where air contains high levels of salt, like e.g. in the vicinity of oceans. (Refer for further information to the engineering databook).
- 9 If you install the unit on a building frame, please install a waterproof plate (within 150 mm of the underside of the unit) or use a drain plug kit (option) in order to avoid the drain water dripping.

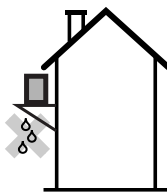

- 10 The equipment is not intended for use in a potentially explosive atmosphere.



The equipment described in this manual may cause electronic noise generated from radio-frequency energy. The equipment complies to specifications that are designed to provide reasonable protection against such interference. However, there is no guarantee that interference will not occur in a particular installation.


It is therefore recommended to install the equipment and electric wires keeping proper distances away from stereo equipment, personal computers, etc... (See figure 2)

- 1 Personal computer or radio
- 2 Fuse
- 3 Earth leakage breaker
- 4 Remote controller
- 5 Cool/heat selector
- 6 Air handling unit
- 7 Control box
- 8 Expansion valve kit

In places with weak reception, keep distances of 3 m or more to avoid electromagnetic disturbance of other equipment and use conduit tubes for power and transmission lines.

5. PRECAUTIONS ON INSTALLATION


- Check the strength and level of the installation ground so that the unit will not cause any operating vibration or noise after installation.
- In accordance with the foundation drawing in the figure, fix the unit securely by means of the foundation bolts. (Prepare four sets of M12 foundation bolts, nuts and washers each which are available on the market.)
- It is best to screw in the foundation bolts until their length are 20 mm from the foundation surface.

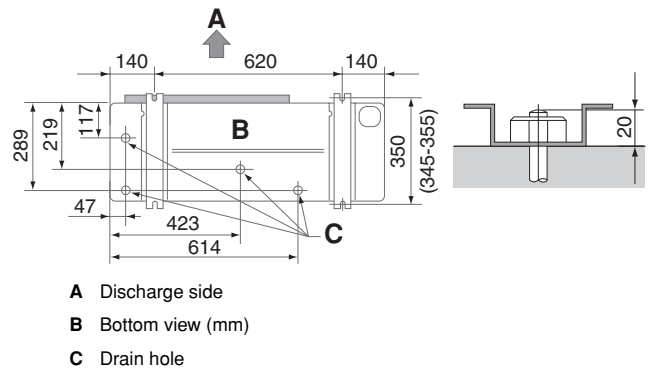

5.1. Installation method for prevention of falling over

If it is necessary to prevent the unit from falling over, install as shown in the figure.

- prepare all 4 wires as indicated in the drawing
- unscrew the top plate at the 4 locations indicated A and B
- put the screws through the nooses and screw them back tight

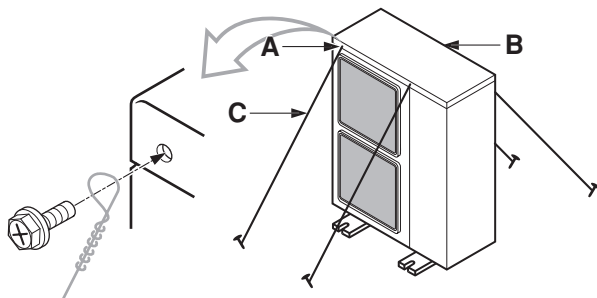

- A location of the 2 fixation holes on the front side of the unit
 B location of the 2 fixation holes on the rear side of the unit
 C wires: field supply

5.2. Method for removing transportation stay

The yellow transportation stay installed over the compressor leg for protecting the unit during transport must be removed. Proceed as shown in figure 3 and described below.

- A Compressor
 B Fixing nut
 C Transportation stay

- 1 Slightly loosen the fixing nut (B).
- 2 Remove the transportation stay (C) as shown in figure 3.
- 3 Tighten the fixing nut (B) again.



CAUTION


If the unit is operated with the transportation stay attached, abnormal vibration or noise may be generated.

5.3. Method for installing drain piping

Depending on installation site, it may be required to install drain plug for drainage (option kit).

In cold areas, do not use a drain hose with the outdoor unit. Otherwise, drain water may freeze, impairing the heating performance.

- 1 See figure below for installation of the drain plug.

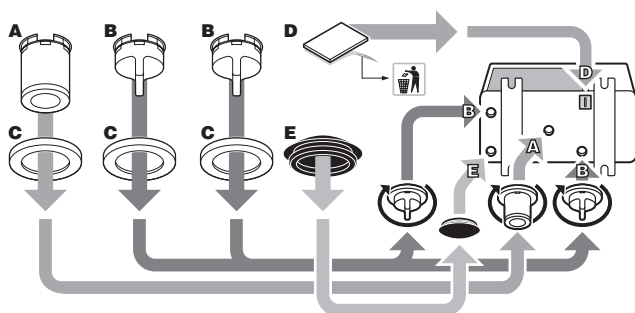

- A Drain socket
 B Drain cap
 C Drain receiver
 D Insulation tape
 E Drain stop


- 2 Connect a field supplied vinyl hose (internal diameter of 25 mm) to the drain socket (A).

If the hose is too long and hangs down, fix it carefully to prevent kinks.

NOTE



If drain holes of the outdoor unit are covered by a mounting base or by floor surface, raise the unit in order to provide a free space of more than 100 mm under the outdoor unit.

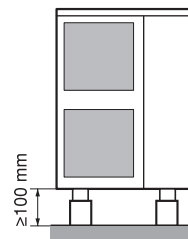

6. INSTALLATION SERVICING SPACE


- The connection piping outlet direction in the installation shown in figure 4 is frontward or downward. The unit of numeric values is mm.
- When routing the piping backward, secure space of ≥ 250 mm on the right side of the unit.

(A) In case of non-stacked installation (See figure 4)


- | | | |
|---------------------------|---|--|
| ← Suction side obstacle | 1 | In these cases, close the bottom of the installation frame to prevent the discharged air from being bypassed |
| ↘ Discharge side obstacle | | |
| ↘ Left side obstacle | 2 | In these cases, only 2 units can be installed. |
| ↘ Right side obstacle | 3 | In these cases, no restriction of height L1. |
| ↘ Top side obstacle | | |
| ✓ Obstacle is present | | This situation is not allowed |

(B) In case of stacked installation

1. In case obstacles exist in front of the outlet side.

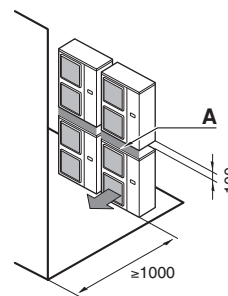

2. In case obstacles exist in front of the air inlet.

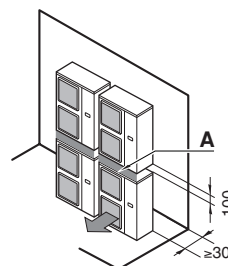


NOTE




- Do not stack more than one unit.
- About 100 mm is required as the dimension for laying the upper outdoor unit's drain pipe.
- Get the portion A sealed so that air from the outlet does not bypass.

(C) In case of multiple-row installation (for roof top use, etc.)

- In case of installing one unit per row.

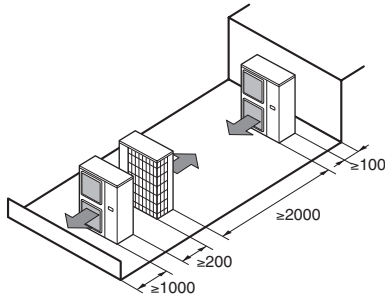

- In case of installing multiple units (2 units or more) in lateral connection per row.

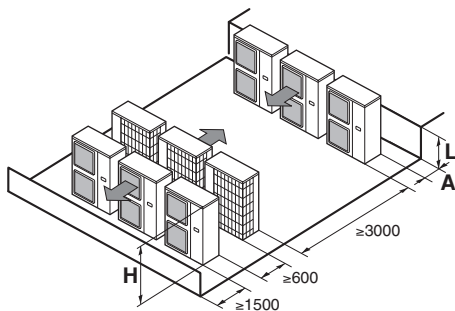

Relation of dimensions between H, A and L is shown in the table below.

	L	A (mm)
L ≤ H	0 < L ≤ 1/2H	250
	1/2H < L ≤ H	300
H < L	Installation impossible	

7. REFRIGERANT PIPE SIZE AND ALLOWABLE PIPE LENGTH



All field piping must be installed by a licensed refrigeration technician and must comply with relevant local and national regulations.



To persons in charge of piping work:

- Be sure to open the stop valve after piping installing and vacuuming is complete. (Running the system with the valve closed may break the compressor.)
- It is forbidden to discharge refrigerant into the atmosphere. Collect the refrigerant in accordance with the freon collection and destruction law.
- Do not use flux when brazing the refrigerant piping. For brazing, use phosphor copper brazing filler metal (BCuP) which does not require a flux. (If a chlorine flux is used, the piping will corrode, and if the flux contains fluoride, it will cause the coolant oil to deteriorate, adversely affecting the coolant piping system.)
- Do not use materials not compatible with copper. Example: Aluminium heat exchanger may be cause of corrosion.

7.1. Selection of piping material

- Foreign materials inside pipes (including oils for fabrication) must be ≤30 mg/10 m.
- Construction material: phosphoric acid deoxidized seamless copper for refrigerant.
- Temper grade: use piping with temper grade in function of the pipe diameter as listed in table below.
- The pipe thickness of the refrigerant piping should comply with relevant local and national regulations. The minimal pipe thickness for R410A piping must be in accordance with the table below.


Pipe Ø	Temper grade of piping material	Minimal thickness t (mm)
6.4 / 12.7	O	0.80
15.9	O	1
19.1	1/2H	1

O = Annealed
1/2H = Half hard

- In case the required pipe sizes (inch sizes) are not available, it is also allowed to use other diameters (mm sizes), taken the following into account:
 - select the pipe size nearest to the required size.
 - use the suitable adapters for the change-over from inch to mm pipes (field supply).

8. PRECAUTIONS ON REFRIGERANT PIPING

- Do not allow anything other than the designated refrigerant to get mixed into the freezing cycle, such as air, etc. If any refrigerant gas leaks while working on the unit, ventilate the room thoroughly right away.
- Use R410A only when adding refrigerant
Installation tools:
 - Make sure to use installation tools (gauge manifold charge hose, etc.) that are exclusively used for R410A installations to withstand the pressure and to prevent foreign materials (e.g. mineral oils and moisture) from mixing into the system.
- Vacuum pump:
 - Use a 2-stage vacuum pump with a non-return valve
 - Make sure the pump oil does not flow oppositely into the system while the pump is not working.
 - Use a vacuum pump which can evacuate to -100.7 kPa (5 Torr, -755 mm Hg).
- In order to prevent dirt, liquid or dust from entering the piping, cure the piping with a pinch or taping.

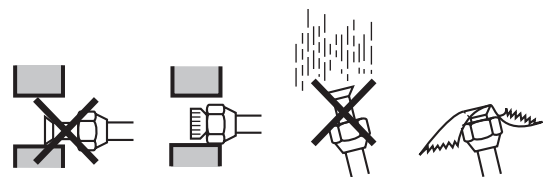


	Installation period	Protection method
	More than a month	Pinch the pipe
	Less than a month	Pinch or tape the pipe
	Regardless of the period	

Great caution is needed when passing copper tubes through walls.

- For handling of stop valves, refer to "9.3. How to use the stop valve" on page 8.
- Only use the flare nuts included with the unit. Using different flare nuts may cause the refrigerant to leak.
- Always use the supplied copper gasket when connecting the gas pipe supplied with the unit. See "9. Refrigerant piping" on page 7.

8.1. Cautions for brazing


- Be sure to carry out a nitrogen blow when brazing. Brazing without carrying out nitrogen replacement or releasing nitrogen into the piping will create large quantities of oxidized film on the inside of the pipes, adversely affecting valves and compressors in the refrigerating system and preventing normal operation.
- When brazing while inserting nitrogen into the piping, nitrogen must be set to 0.02 MPa with a pressure-reducing valve (=just enough so that it can be felt on the skin).

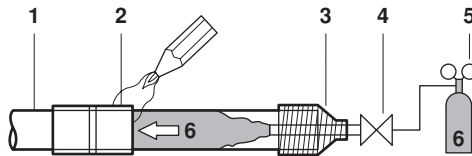


- 1 Refrigerant piping
- 2 Part to be brazed
- 3 Taping
- 4 Hands valve
- 5 Pressure-reducing valve
- 6 Nitrogen

8.2. Cautions for flare connection

- See the following table for flare part machining dimensions.
- When connecting the flare nut, coat the flare inner surface with ether oil or ester oil and initially tighten 3 or 4 turns by hand before tightening firmly.



- When loosening a flare nut, always use two wrenches in combination. When connecting the piping, always use a spanner and torque wrench in combination to tighten the flare nut.

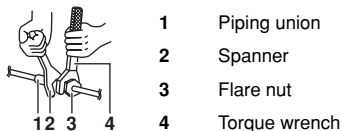

- See the following table for tightening torque. (Applying too much torque may cause the flares to crack.)

Pipe size	Tightening torque (N·m)	A (mm)	Flare shape
Ø9.5	33~39 N·m	12.8~13.2	
Ø15.9	63~75 N·m	19.3~19.7	
Ø19.1	98~110 N·m	12.3~23.7	

- After all the piping has been connected, use nitrogen to perform a gas leak check.

NOTE



You must use a torque wrench but if you are obliged to install the unit without a torque wrench, you may follow the installation method mentioned below.

After the work is finished, make sure to check that there is no gas leak.

When you keep on tightening the flare nut with a spanner, there is a point where the tightening torque suddenly increases. From that position, further tighten the flare nut within the angle shown below:

Pipe size	Further tightening angle	Recommended arm length of tool
Ø9.5 (3/8")	60~90°	±200 mm
Ø15.9 (5/8")	30~60°	±300 mm
Ø19.1 (5/8")	20~35°	±450 mm

9. REFRIGERANT PIPING

- Field pipes can be installed in four directions.

Figure - Field pipes in four directions (See figure 5)

- 1 Drill
- 2 Center area around knockout hole
- 3 Knockout hole
- 4 Slit
- 5 Connecting pipe liquid (field supply)
- 6 Bottom frame
- 7 Front plate
- 8 Pipe outlet plate
- 9 Screw front plate
- 10 Pipe outlet plate screw
- 11 Connecting pipe gas (field supply, except ERQ250)
- A Forward
- B Backward
- C Sideways
- D Downward

When connecting the piping in the lateral direction (on the rear), remove the piping cover (rear) in reference to figure 7.

- 1 Piping cover (rear)

- To install the connecting pipe to the unit in a downward direction, make a knockout hole by penetrating the center area around the knockout hole using a Ø6 mm drill. (See figure 5).
- Cutting out the two slits makes it possible to install as shown in figure 5. (Use a metal saw to cut out the slits.)
- After knocking out the knock-out, it is recommended to apply repair paint to the edge and the surrounding end surfaces to prevent rusting.


For ERQ140 only

The size of the gas side stop valve is $\varnothing 15.9$ while the inter-unit piping is $\varnothing 19.1$. Use the standard supplied accessory piping to make the connection. See figure 14.

- A Front connection
- B Rear connection
- C Side connection
- D Bottom connection
- 1 Gas line piping + copper gasket supplied with the unit (make sure to always use the copper gasket).
- 2 Gas line piping supplied with the unit
- 3 Gas piping (field supply)
- 4 Cut to the appropriate length.
- 5 Gas line piping supplied with the unit

9.1. Preventing foreign objects from entering

Plug the pipe through-holes with putty or insulating material (field supply) to stop up all gaps, as shown in the figure.

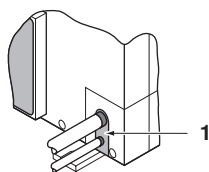

- 1 Putty or insulating material (field supply)

Insects or small animals entering the outdoor unit may cause a short circuit in the electrical box.


9.2. Cautions for handling stop valve

- The stop valves for air handling unit-outdoor connecting piping are closed at shipment from the factory.





Make sure to keep the valve open during operation.

The names of parts of the stop valve are shown in the figure.

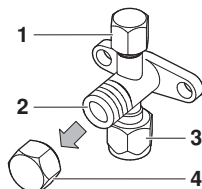

- 1 Service port
- 2 Stop valve
- 3 Field piping connection
- 4 Valve cover


- Since the side boards may be deformed if only a torque wrench is used when loosening or tightening flare nuts, always lock the stop valve with a wrench and then use a torque wrench. Do not place wrenches on the valve cover.

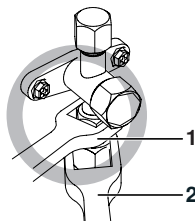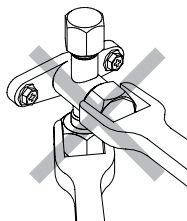

- 1 Spanner
- 2 Torque wrench

Do not apply force on the valve cover, this may result in a refrigerant leak.

- For cooling operation under low ambient temperature or any other operation under low pressure, apply silicon pad or similar to prevent freezing of the gas stop valve flare nut (see figure). Freezing of the flare nut may cause refrigerant leak.



■ Silicon sealing pad
(Make sure there is no gap)

9.3. How to use the stop valve


Use hexagonal wrenches 4 mm and 6 mm.

- Opening the valve

1. Place the hex wrench on the valve bar and turn counter-clockwise.
2. Stop when the valve bar no longer turns. It is now open.


- Closing the valve

1. Place the hex wrench on the valve bar and turn clockwise.
2. Stop when the valve bar no longer turns. It is now closed.

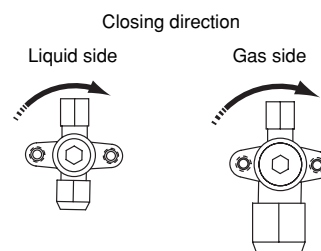

9.4. Cautions for handling the valve cover

- The valve cover is sealed where indicated by the arrow. Take care not to damage it.

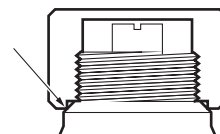

- After operating the valve, be sure to tighten the valve cover properly.

Tightening torque	
Liquid pipe	13.5~16.5 N·m
Gas pipe	22.5~27.5 N·m

- Check for refrigerant leakage after tightening the cap.

9.5. Cautions for handling service port

After the work, tighten the valve cover in place.

Tightening torque: 11.5~13.9 N·m


9.6. Precautions when connecting field piping and regarding insulation

- Be careful not to let the air handling and outdoor branch piping come into contact with the compressor terminal cover.
If the liquid-side piping insulation might come into contact with it, adjust the height as shown in the figure below. Also, make sure the field piping does not touch the bolts or outer panels of the compressor.
- When the outdoor unit is installed above the air handling unit the following can occur:
The condensated water on the stop valve can move to the air handling unit. To avoid this, please cover the stop valve with sealing material.
- If the temperature is higher than 30°C and the humidity is higher than RH 80%, then the thickness of the sealing materials should be at least 20 mm in order to avoid condensation on the surface of the sealing.
- Be sure to insulate the liquid and gas-side field piping and the refrigerant branch kit.



Any exposed piping may cause condensation or burns if touched.

(The highest temperature that the gas-side piping can reach is around 120°C, so be sure to use insulating material which is very resistant.)

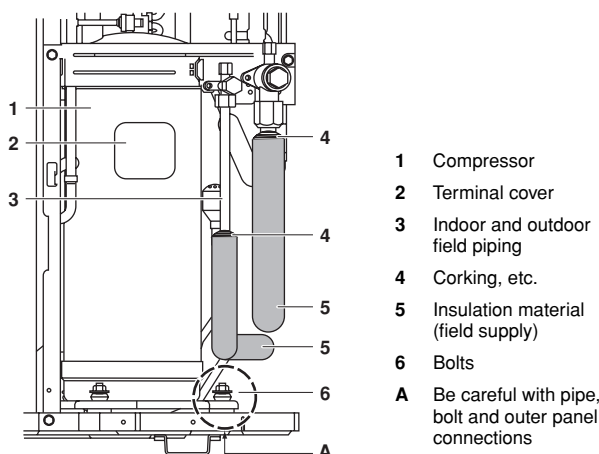

9.7. Leak test and vacuum drying

The units were checked for leaks by the manufacturer.

See figure 6 and refer to "Additional refrigerant charge" on page 9 for nomenclature of the parts in figure 6.

- Confirm that the gas and liquid line stop valves are firmly closed before pressure test or vacuuming.
- Make sure that valve A is completely open.

Air tight test and vacuum drying

- Air tight test: Make sure to use nitrogen gas. (For the service port position, refer to "9.2. Cautions for handling stop valve" on page 8.
- Pressurize the liquid and gas pipes to 4.0 MPa (40 bar) (do not pressurize more than 4.0 MPa (40 bar)). If the pressure does not drop within 24 hours, the system passes the test. If the pressure drops, check where the nitrogen leaks from.
- Vacuum drying: Use a vacuum pump which can evacuate to -100.7 kPa (5 Torr, -755 mm Hg)
 1. Evacuate the system from the liquid and gas pipes by using a vacuum pump for more than 2 hours and bring the system to -100.7 kPa. After keeping the system under that condition for more than 1 hour, check if the vacuum gauge rises or not. If it rises, the system may either contain moisture inside or have leaks.
 2. Following should be executed if there is a possibility of moisture remaining inside the pipe (if piping work is carried out during the raining season or over a long period of time, rainwater may enter the pipe during work).

After evacuating the system for 2 hours, pressurize the system to 0.05 MPa (vacuum break) with nitrogen gas and evacuate the system again using the vacuum pump for 1 hour to -100.7 kPa (vacuum drying). If the system cannot be evacuated to -100.7 kPa within 2 hours, repeat the operation of vacuum break and vacuum drying.

Then, after leaving the system in vacuum for 1 hour, confirm that the vacuum gauge does not rise.

10. ADDITIONAL REFRIGERANT CHARGE



- Refrigerant cannot be charged until field wiring has been completed.
- Refrigerant may only be charged after performing the leak test and the vacuum drying (see above).
- When charging a system, care shall be taken that its maximum permissible charge is never exceeded, in view of the danger of liquid hammer.
- Charging with an unsuitable substance may cause explosions and accidents, so always ensure that the appropriate refrigerant (R410A) is charged.
- Refrigerant containers shall be opened slowly.
- Always use protective gloves and protect your eyes when charging refrigerant.
- When performing service on the unit requiring the refrigerant system to be opened, refrigerant must be evacuated according to local regulations.
- When the power is on, please close the front panel when leaving the unit.




See figure 6.

- 1 Pressure reducing valve
- 2 Nitrogen
- 3 Tank
- 4 Siphon system
- 5 Measuring instrument
- 6 Vacuum pump
- 7 Valve A
- 8 Gas line stop valve
- 9 Outdoor unit
- 10 Liquid line stop valve
- 11 Air handling unit
- 12 Stop valve service port
- 13 Charge hose

To avoid compressor breakdown. Do not charge the refrigerant more than the specified amount.

- This outdoor unit is factory charged with refrigerant and depending on pipe sizes and pipe lengths some systems require additional charging of refrigerant. See ["How to calculate the additional refrigerant to be charged" on page 10.](#)
- In case re-charge is required, refer to the nameplate of the unit. The nameplate states the type of refrigerant and necessary amount.

Installation limitations

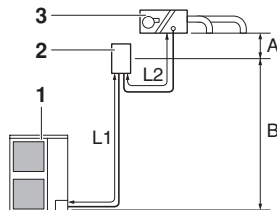

- 1 Outdoor unit
- 2 Valve kit
- 3 Air handling unit

	Max (m)	Min (m)
L1	50	5
L2	5	—
A	-5 / +5 ^(*)	—
B	-35 / +35 ^(*)	—

(*) Below or above the outdoor unit.

How to calculate the additional refrigerant to be charged

Additional refrigerant to be charged R (kg)

R should be rounded off in units of 0.1 kg

$R = (\text{Total length (m) of liquid piping size at } \varnothing 9.5) \times 0.054$

Determine the weight of refrigerant to be charged additionally referring to the item "Additional refrigerant charge" in ["How to calculate the additional refrigerant to be charged" on page 10](#) and fill in the amount in the "Additional refrigerant charge label" attached to the unit.


Precautions when adding R410A

Be sure to charge the specified amount of refrigerant in liquid state to the liquid pipe.

Since this refrigerant is a mixed refrigerant, adding it in gas form may cause the refrigerant composition to change, preventing normal operation.

- Before charging, check whether the refrigerant cylinder is equipped with a siphon tube or not.

Charge the liquid refrigerant with the cylinder in upright position.

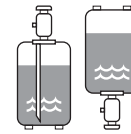

Charge the liquid refrigerant with the cylinder in up-side-down position.



10.1. Important information regarding the refrigerant used

This product contains fluorinated greenhouse gases covered by the Kyoto Protocol. Do not vent gases into the atmosphere.

Refrigerant type: R410A

GWP⁽¹⁾ value: 1975


(1) GWP = global warming potential

Please fill in with indelible ink,

- ① the factory refrigerant charge of the product,
- ② the additional refrigerant amount charged in the field and
- ①+② the total refrigerant charge

on the fluorinated greenhouse gases label supplied with the product.

The filled out label must be adhered on the inside of the product and in the proximity of the product charging port (e.g. on the inside of the service cover).

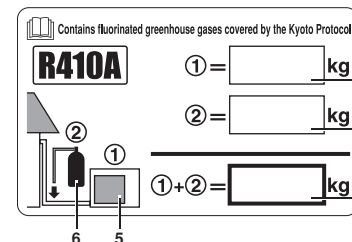

- 1 factory refrigerant charge of the product: see unit name plate
- 2 additional refrigerant amount charged in the field
- 3 total refrigerant charge
- 4 Contains fluorinated greenhouse gases covered by the Kyoto Protocol
- 5 outdoor unit
- 6 refrigerant cylinder and manifold for charging

NOTE




National implementation of EU regulation on certain fluorinated greenhouse gases may require to provide the appropriate official national language on the unit. Therefore, an additional multilingual fluorinated greenhouse gases label is supplied with the unit.

Sticking instructions are illustrated on the backside of that label.

10.2. 2 procedures for adding refrigerant

How to connect the tank?

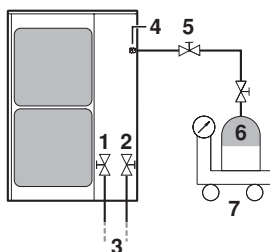

- 1 Liquid line stop valve
- 2 Gas line stop valve
- 3 To air handling unit
- 4 Service port for adding refrigerant
- 5 Valve A
- 6 R410A tank
- 7 Measuring instrument
- 8 Pipe fixing plate

When the refrigerant tank is connected and the specified operation is performed, the appropriate amount of refrigerant will be charged into the system. After charging, the system will stop automatically. The refrigerant must be charged according to the procedure described below.

Procedure 1: Charging while the outdoor unit is at a standstill

See figure 6.

- 1 Determine the weight of refrigerant to be charged additionally referring to the item "Additional refrigerant charge" in "How to calculate the additional refrigerant to be charged" on page 10 and fill in the amount in the "Additional refrigerant charge label" attached to the unit.
- 2 After the vacuum drying is finished, open valve A and charge the additional refrigerant in its liquid state through the service port on the liquid stop valve taking into account following instructions:
 - Turn on the power of the outdoor unit, control box and air handling units.
 - Check that gas and liquid stop valves are closed.
 - Stop the compressor and charge the specified weight of refrigerant.



- To avoid compressor breakdown. Do not charge the refrigerant more than the specified amount.
- If the total refrigerant cannot be charged while the outdoor unit is at a standstill, it is possible to charge the refrigerant by operating the outdoor unit using the refrigerant charge function (refer to "Setting mode 2" on page 16) and follow "Procedure 2: Charging while the outdoor unit is operating" on page 11.

Procedure 2: Charging while the outdoor unit is operating

See the figure in "How to connect the tank?" on page 11.

- 1 Completely open the gas side stop valve and liquid side stop valve. Valve A must be left fully closed.
- 2 Close the front panel and turn on the power to the control box, air handling unit and the outdoor unit.
- 3 Open valve A immediately after starting of the compressor.
- 4 Charge the additional refrigerant in its liquid state through the service port of the liquid line stop valve.
- 5 While the unit is at a standstill and under setting mode 2 (refer to [Checks before initial start-up](#), "Setting the mode" on page 16), set the required function A (additional refrigerant charging operation) to ON (ON). Then operation starts. The blinking H2P led indicates test operation and the remote controller indicates TEST (test operation) and (external control).
- 6 When the specified amount of refrigerant is charged, push the BS3 RETURN button. Then operation stops.
 - The operation automatically stops within 30 minutes.
 - If the refrigerant charge cannot be finished within 30 minutes, repeat step 5.
 - If the operation stops immediately after restart, there is a possibility that the system is overcharged. The refrigerant cannot be charged more than this amount.
- 7 After the refrigerant charge hose is removed, make sure to close valve A.

11. ELECTRICAL WIRING WORK



- All wiring must be performed by an authorized electrician.
- All field supplied components and all electric construction should comply with the applicable local and national codes.



To persons in charge of electrical wiring work:

Do not operate the unit until the refrigerant piping is complete. (Running it before the piping is ready will break the compressor.)

11.1. Internal wiring – Parts table

L.....	Live
N.....	Neutral
⋮⋮	Field wiring
	Terminal strip
	Connector
	Protective earth (screw)
	Connection
	Relay connector
	Functional earthing
	Terminal
	Movable connector
	Fixed connector
BLU.....	Blue
BRN.....	Brown
GRN.....	Green
RED.....	Red

WHT	White
YLW	Yellow
ORG	Orange
BLK	Black
A1P	Printed circuit board (main)
A2P	Printed circuit board (inverter)
A3P	Printed circuit board (noise filter)
A4P	Printed circuit board (C/H selector)
BS1~BS5	Push button switch (mode, set, return, test, reset)
C1~C3	Capacitor
C4	Capacitor
DS1	DIP switch
E1HC	Crankcase heater
F1U, F4U	Fuse (T 6.3 A/250 V)
F6U	Fuse (T 5.0 A/250 V)
FINTH	Thermistor (fin)
H1P~H8P	Light emitting diode (service monitor orange) Prepare, test: blinking
H2P	Malfunction detection: light up
HAP	Light emitting diode (service monitor green)
K1M	Magnetic contactor (M1C)
K1R	Magnetic relay (Y1S)
K2R	Magnetic relay (Y2S)
K3R	Magnetic relay (Y3S)
K4R	Magnetic relay (E1HC)
K5R	Magnetic relay
L1R	Reactor
M1C	Motor (compressor)
M1F	Motor (fan) (upper)
M2F	Motor (fan) (lower)
PS	Switching power supply
Q1DI	Field earth leakage breaker (300 mA)
R1	Resistor (current limiting)
R2	Resistor (current sensor)
R1T	Thermistor (air)
R2T	Thermistor (discharge)
R3T	Thermistor (suction 1)
R4T	Thermistor (heat exchanger)
R5T	Thermistor (suction 2)
R6T	Thermistor (subcooling heat exchanger)
R7T	Thermistor (liquid pipe)
R8T	Thermistor (liquid pipe 2)
S1NPH	Pressure sensor (high)
S1NPL	Pressure sensor (low)
S1PH	Pressure switch (high)
V1R	Power module
V2R, V3R	Diode module
V1T	IGBT (Insulated Gate Bipolar Transistor)
X1M	Terminal strip (power supply)
X1M	Terminal strip (C/H selector) (A4P)
X2M	Terminal strip (control)
Y1E	Electronic expansion valve (main)
Y3E	Electronic expansion valve (subcool)
Y1S	Solenoid valve (4 way valve)

Y2S	Solenoid valve (hot gas)
Y3S	Solenoid valve (unload circuit)
Z1C~Z8C	Noise filter (ferrite core)
Z1F~Z4F	Noise filter

Cool/heat selector

S1S	Selector switch (fan/cool – heat)
S2S	Selector switch (cool – heat)

Connector of option adaptor

X37A	Connector (option adaptor power supply)
------------	---

NOTE



- This wiring diagram only applies to the outdoor unit.
- Refer to the wiring diagram sticker (on the back of the front plate) for instructions on how to use BS1~BS5 and DS1-1, DS1-2 switches.
- Do not operate the unit by short-circuiting protection device S1PH.
- Refer to the installation manual for connection wiring to the control box.

11.2. Precautions on electrical wiring work

- Before obtaining access to terminal devices, all supply circuits must be interrupted.
- Use only copper wires.
- Do not turn on the main switch until all the wiring is completed. Make sure that the main switch has a contact separation of at least 3 mm in all poles.
- Never squeeze bundled cables into a unit.
- Secure the electrical wiring with clamping material as shown in figure 9 so that it does not come in contact with the piping, particularly on the high-pressure side. Make sure no external pressure is applied to the terminal connectors.
- When installing the earth leakage breaker make sure that it is compatible with the inverter (resistant to high frequency electrical noise) to avoid unnecessary opening of the earth leakage breaker.
- As this unit is equipped with an inverter, installing a phase advancing capacitor not only will deteriorate power factor improvement effect, but also may cause capacitor abnormal heating accident due to high-frequency waves. Therefore, never install a phase advancing capacitor.
- Follow the "electrical wiring diagram" when carrying out any electrical wiring.
- Always ground wires. (In accordance with national regulations of the pertinent country.)
- Do not connect the ground wire to gas pipes, sewage pipes, lightning rods, or telephone ground wires.
 - Combustion gas pipes: can explode or catch fire if there is a gas leak.
 - Sewage pipes: no grounding effect is possible if hard plastic piping is used.
 - Telephone ground wires and lightning rods: dangerous when struck by lightning due to abnormal rise in electrical potential in the grounding.
- This unit uses an inverter, and therefore generates noise, which will have to be reduced to avoid interfering with other devices. The outer casing of the product may take on an electrical charge due to leaked electrical current, which will have to be discharged with the grounding.

11.3. Connection example of total system wiring

(See figure 8)

- 1 Power
- 2 Earth leakage breaker
- 3 Branch switch overcurrent breaker (fuse)
- 4 Ground
- 5 Communication wiring
- 6 Control box


11.4. Connecting power wire and transmission wires

- Let the power wire (including ground wire) go through the power outlet port on either the front, side or back of the outdoor unit.
- Let the transmission wires go through the cable outlet port, pipe outlet port or knock out hole on either the front, side or back of the outdoor unit. (See figure 9).

- A Rear direction
- B Lateral direction
- C Front direction
- 1 Power terminal block (X1M)
- 2 Control wiring between units
- 3 Power cable with ground wire. (Keep proper distance between power cable and control wiring).
- 4 Clamp (field supply)
- 5 Stop valve mounting plate
- 6 Power cable
- 7 Ground cable (yellow/green)
- 8 Fix the control wiring with the clamp
- 9 Control terminal block (X2M)

Precautions when knocking out knockout holes

- To punch a knock hole, hit on it with a hammer.
- After knocking out the holes, we recommend you paint the edges and areas around the edges using the repair paint to prevent rusting.
- When passing electrical wiring through the knock holes, remove any burrs from the knock holes and wrap the wiring with protective tape to prevent damage.
- If there is any possibility that small animals enter the system through the knock holes, plug the holes with packing materials (to be prepared on-site).

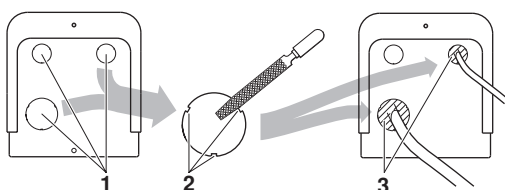

- 1 Knockout hole
- 2 Burr
- 3 Packing materials



- Use a power wire pipe for the power wiring.
- Outside the unit, make sure the low voltage electric wiring (i.e. for the remote control, between units, etc.) and the high voltage electric wiring do not pass near each other, keeping them at least 50 mm apart. Proximity may cause electrical interference, malfunctions, and breakage.
- Be sure to connect the power wiring to the power wiring terminal block and secure it as described under "11.4. Connecting power wire and transmission wires" on page 13.
- Inter-unit wiring should be secured as described in "11.4. Connecting power wire and transmission wires" on page 13.
- Secure the wiring with clamps so that it does not touch the piping.
- Make sure the wiring and the electric box lid do not stick up above the structure, and close the cover firmly.

11.5. Power circuit and cable requirements

A power circuit (see table below) must be provided for connection of the unit. This circuit must be protected with the required safety devices, i.e. a main switch, a slow blow fuse on each phase and an earth leakage breaker.

ERQ100~140	
Phase and frequency	1 ~ 50 Hz
Voltage	220-240 V
Recommended field fuse	32 A
Minimum circuit amps (MCA) ^(*)	27
Transmission line section	0.75~1.25 mm ²
Wire type ^(†)	H05VV

(*) Stated values are maximum values.

(†) Only in protected pipes, use H07RN-F when protected pipes are not used.

NOTE



- Select the power supply cable in accordance with relevant local and national regulations.
 - Wire size must comply with the applicable local and national code.
 - Specifications for local wiring power cord and branch wiring are in compliance with IEC60245.
- In connecting the power cable to the power terminal block, securely clamp the cable as shown in figure 9.



After finishing the electric work, confirm that each electric part and terminal inside the electric parts box is connected securely.

Equipment complying with EN/IEC 61000-3-12⁽¹⁾.

(1) European/International Technical Standard setting the limits for harmonic currents produced by equipment connected to public low-voltage systems with input current >16 A and ≤75 A per phase.




Precautions when laying power wiring

Use round pressure terminals for connections to the power terminal block.

When none are available, follow the instructions below.

- Do not connect wiring of different thicknesses to the power terminal block. (Slack in the power wiring may cause abnormal heat.)
- When connecting wiring which is the same thickness, do as shown in the figure below.

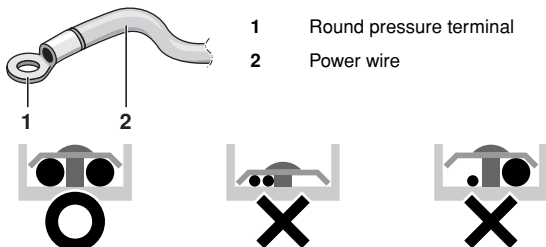

- For wiring, use the designated power wire and connect firmly, then secure to prevent outside pressure being exerted on the terminal board.
- Use an appropriate screwdriver for tightening the terminal screws. A screwdriver with a small head will strip the head and make proper tightening impossible.
- Over-tightening the terminal screws may break them.
- See the table below for tightening torque for the terminal screws.

Tightening torque (N·m)	
M5 (Power terminal block/ground wire)	2.39~2.92
M4 (Shielded ground)	1.18~1.44
M3.5 (Control wiring block)	0.79~0.97

Field line connection: Control wiring and cool/heat selection



If an excessive force is applied while connecting a cable to the terminal block on the PC board, the PC board may be damaged.

See figure 10.

- 1 Cool/heat selector
- 2 Outdoor unit PC board
- 3 Take care of the polarity
- 4 Use the conductor of sheathed wire (2 wire) (no polarity)
- 5 Terminal board (field supply)

Setting the cool/heat operation

- 1 Performing cool/heat setting with the remote controller connected to the control box.
Keep the cool/heat selector switch (DS1-1) on the outdoor unit PC board at the factory setting position IN/D UNIT. (See figure 11).
- 2 Performing cool/heat setting with the cool/heat selector.
Connect the cool/heat selector remote controller (optional) to the A/B/C terminals and set the cool/heat selector switch (DS1-1) on the outdoor unit PC board to OUT/D UNIT. (See figure 12).

1 Cool/heat selector
- 3 Perform cool/heat setting with the field supplied controller.
Set the cool/heat selector switch (DS1-1) on the outdoor unit PC board (A1P) to OUT/D UNIT. (See figure 12).
Connect the A/B/C terminals with the field supplied controller so that:
 - A/B/C terminals are not connected for cooling operation
 - A and C terminals are short-circuited for heating operation
 - B and C are short-circuited for fan only operation



For low-noise operation or demand operation, it is necessary to get the optional 'External control adaptor for outdoor unit' (DTA104A61/62).

For details, see the installation manual attached to the adaptor.



- Be sure to follow the limits below. If the unit-to-unit cables are beyond these limits, it may result in malfunction of transmission.
Maximum wiring length: F1/F2=100 m
- Never connect the power supply to unit-to-unit cabling terminal block. Otherwise the entire system may break down.

- The wiring from the air handling units must be connected to the F1/F2 (In-Out) terminals on the PC board in the outdoor unit.
- After installing the interconnecting wires inside the unit, wrap them along with the on-site refrigerant pipes using finishing tape, as shown in figure 13.

 1 Liquid pipe
 2 Gas pipe
 3 Interconnecting wiring
 4 Insulator
 5 Finishing tape

For the above wiring, always use vinyl cords with 0.75 to 1.25 mm² sheath or cables (2-core wires). (3-core wire cables are allowable for the cooler/heater changeover remote controller only.)


12. BEFORE OPERATION

12.1. Service precautions



Caution when performing service to inverter equipment

- Do not touch live parts for 10 minutes after the power supply is turned off because of high voltage risk.
- Additionally, measure the points as shown in the figure with a tester and confirm that the voltage of the capacitor in the main circuit is no more than 50 V DC.

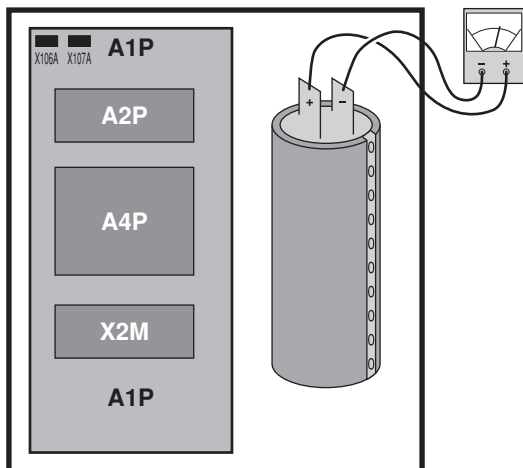

- Make sure that the power supply is turned off before performing the maintenance work. The heater of the compressor may operate even in stop mode.
- Please note that some sections of the electric component box are extremely hot.
- In order to prevent damage to the PCB, first eliminate static electricity by touching a metal part (e.g. stop valve) with your hand. Then pull out the connector.
- After measuring the residual voltage, pull out the outdoor fan connector.
- Make sure you do not touch a conductive section.
- The outdoor fan may rotate due to strong backblow wind, causing the capacitor to charge. This may result in an electric shock.

After maintenance, make sure the outdoor fan connector is connected again. Otherwise, the unit may break down.



Play it safe!

Touch a metal part by hand (such as the stop valve) in order to eliminate static electricity and to protect the PCB before performing service.

12.2. Checks before initial start-up

NOTE



Note that during the first running period of the unit, required power input may be higher than stated on the nameplate of the unit. This phenomenon originates from the compressor that needs elapse of a 50 hours run in period before reaching smooth operation and stable power consumption.



- Make sure that the circuit breaker on the power supply panel of the installation is switched off.
- Attach the power wire securely.
- Introducing power with a missing N-phase or with a mistaken N-phase will break the equipment.

After the installation, check the following before switching on the circuit breaker:


- 1 Transportation stay
Be sure that the transportation stay is removed from the compressor.
- 2 The position of the switches that require an initial setting
Make sure that switches are set according to your application needs before turning the power supply on.
- 3 Power supply wiring and transmission wiring
Use a designated power supply and transmission wiring and make sure that it has been carried out according to the instructions described in this manual, according to the wiring diagrams and according to local and national regulations.
- 4 Pipe sizes and pipe insulation
Make sure that correct pipe sizes are installed and that the insulation work is properly executed.
- 5 Additional refrigerant charge
The amount of refrigerant to be added to the unit should be written on the included "Added Refrigerant" plate and attached to the rear side of the front cover.
- 6 Insulation test of the main power circuit
Using a megatester for 500 V, check that the insulation resistance of 2 MΩ or more is attained by applying a voltage of 500 V DC between power terminals and earth. Never use the megatester for the transmission wiring.
- 7 Stop valves
Be sure that the stop valves are open on both liquid and gas side.
- 8 Drain pipe installation
Make sure that the drain piping is installed properly.

12.3. Field setting

If required, carry out any field setting according to the following instructions. Refer to the service manual for more details.


Handling the switches

When carrying out field settings, operate the switches with an insulated stick (such as a ball-point pen) to avoid touching of live parts.



Location of the DIP switches, leds and buttons

- 1 Led H1P~H8P
- 2 Push button switches BS1~BS5
- 3 DIP switches 2 (DS1-1, DS1-2)

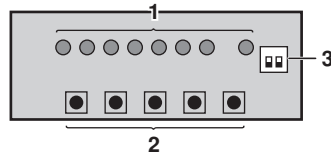


Led state

Throughout the manual the state of the leds is indicated as follows:

- OFF
- ☀ ON
- ☀ blinking

Setting the push button switch (BS1~5)

Function of the push button switch which is located on the outdoor unit PCB:

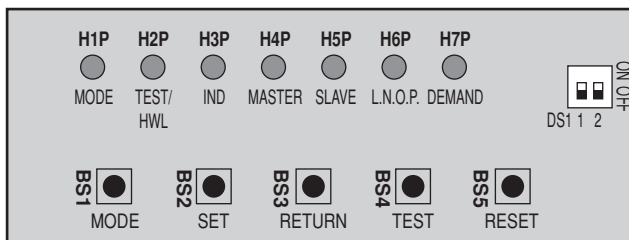

- BS1 MODE** For changing the set mode
- BS2 SET** For field setting
- BS3 RETURN** For field setting
- BS4 TEST** For test operation
- BS5 RESET** For resetting the address when the wiring is changed or when an additional air handling unit is installed

The figure shows state of the led indications when the unit is shipped from the factory.

Setting the mode

The set mode can be changed with the **BS1 MODE** button according to the following procedure:

- **For setting mode 1:** Press the **BS1 MODE** button once, the H1P led is off ●.
- **For setting mode 2:** Press the **BS1 MODE** button for 5 seconds, the H1P led is on ☀.

If the H1P led is blinking ☀ and the **BS1 MODE** button is pushed once, it will change to setting mode 1.

NOTE If you get confused in the middle of the setting process, push the **BS1 MODE** button. Then it returns to setting mode 1 (H1P led is off).

Setting mode 1

The H1P led is off (COOL/HEAT selection setting).

Setting procedure

- 1 Push the **BS2 SET** button and adjust the led indication to either one of the possible settings as shown below in the field marked :
 - 1 In case of COOL/HEAT setting by each individual outdoor unit circuit.

	H1P	H2P	H3P	H4P	H5P	H6P	H7P
1	●	●	☀	●	●	●	●

- 2 Push the **BS3 RETURN** button and the setting is defined.

Setting mode 2

The H1P led is on.

Setting procedure

- 1 Push the **BS2 SET** button according to the required function (A~F). The led indication that matches the required function is shown below in the field marked :

Possible functions

- A** additional refrigerant charging operation (not applicable).
- B** refrigerant recovery operation/vacuuming operation.
- C** automatic low noise operation setting at nighttime.
- D** low noise operation level setting (L.N.O.P) via the external control adapter.
- E** power consumption limitation setting (DEMAND) via the external control adapter.
- F** enabling function of the low noise operation level setting (L.N.O.P) and/or power consumption limitation setting (DEMAND) via the external control adapter (DTA104A61/62).

	H1P	H2P	H3P	H4P	H5P	H6P	H7P
A	☀	●	☀	●	☀	●	●
B	☀	●	☀	●	☀	●	☀
C	☀	●	☀	●	☀	☀	●
D	☀	●	☀	☀	●	●	☀
E	☀	●	☀	☀	☀	☀	●
F	☀	●	●	☀	☀	●	●

- 2 When the **BS3 RETURN** button is pushed, it indicates the current setting.
- 3 Push the **BS2 SET** button according to the required setting possibility as shown below in the field marked .
 - 3.1 Possible settings for function A, B and F are ON (ON) or OFF (OFF).

	H1P	H2P	H3P	H4P	H5P	H6P	H7P
ON	☀	●	●	●	●	☀	●
OFF(*)	☀	●	●	●	●	●	☀

(*) This setting = factory setting.

- 3.2 Possible settings for function C

The noise of level 3 < level 2 < level 1 (\blacktriangleleft 1).

	H1P	H2P	H3P	H4P	H5P	H6P	H7P
OFF(*)	☀	●	●	●	●	●	●
\blacktriangleleft 1	☀	●	●	●	●	●	☀
\blacktriangleleft 2	☀	●	●	●	●	☀	●
\blacktriangleleft 3	☀	●	●	●	●	☀	☀

(*) This setting = factory setting.

3.3 Possible settings for function D and E

For function D (L.N.O.P) only: the noise of level 3 < level 2 < level 1 (▲ 1).

For function E (DEMAND) only: the power consumption of level 1 < level 2 < level 3 (▲ 3).

	H1P	H2P	H3P	H4P	H5P	H6P	H7P
1	●	●	●	●	●	●	●
2 (*)	●	●	●	●	●	●	●
3	●	●	●	●	●	●	●

(*) This setting = factory setting.

4 Push the **BS3 RETURN** button and the setting is defined.

5 When the **BS3 RETURN** button is pushed again, the operation starts according to the setting.

Refer to the service manual for more details and for other settings.



When finished, please mark the settings of function C, D and E in the "Records" part of the label on the backside of the front plate.

Confirmation of the set mode

The following items can be confirmed by setting mode 1 (H1P led is off)

Check the led indication in the field marked .

1 Indication of the present operation state

- normal
- ☀ abnormal
- ☀ under preparation or under test operation

H1P	H2P	H3P	H4P	H5P	H6P	H7P
●	●	☀	●	●	●	●

2 Indication of COOL/HEAT selection setting

1 When set to COOL/HEAT change-over by each individual outdoor unit circuit (= factory setting).

H1P	H2P	H3P	H4P	H5P	H6P	H7P
●	●	☀	●	●	●	●

(*) This setting = factory setting.

3 Indication of low noise operation state L.N.O.P

- standard operation (= factory setting)
- ☀ L.N.O.P operation

H1P	H2P	H3P	H4P	H5P	H6P	H7P
●	●	☀	●	●	●	●

4 Indication of power consumption limitation setting **DEMAND**

- standard operation (= factory setting)
- ☀ **DEMAND** operation

H1P	H2P	H3P	H4P	H5P	H6P	H7P
●	●	☀	●	●	●	●

12.4. Test operation

NOTE



- After turning on the power supply, the unit can not be started until the H2P initialisation led goes off (maximum 12 minutes).
- Depending on the application, it is possible that the remote controller is required for performing settings during first installation and servicing only (service tool).

- Check the stop valves
Make sure to open the gas and liquid line stop valves.
- After installation, perform the test operation.
Unless the test operation is performed, the error code "U3" is shown on the remote controller and the unit cannot be operated.

Performing the test operation

- 1 To protect the compressor, make sure to turn on the power supply 6 hours before starting operation.
- 2 Set to setting mode 1 (H1P led is off) (refer to "Setting mode 1" on page 16).
- 3 Press the **BS4 TEST** button for 5 seconds when the unit is at a standstill. The test operation starts when the H2P led blinks and the remote controller indicates **TEST** (test operation) and

It may take 10 minutes to bring the state of refrigerant uniform before the compressor starts, but that is not a malfunction. The test operation is automatically carried out in cooling mode during 15~30 minutes. Depending on the situation, the refrigerant running sound or the sound of a magnetic solenoid valve may rise during this operation.

The following items are automatically checked:

- Check for incorrect wiring
- Check if stop valves are open
- Check of refrigerant charge
- Automatic judgement of piping length



When you want to terminate the test operation, press the **BS3 RETURN** button. The unit will keep running for 30 seconds and then stops. During test operation it is impossible to stop the unit with the remote controller.

- 4 After the test operation (maximum 30 minutes), the unit automatically stops. Check the operation results by the outdoor unit led indication.

normal
abnormal

H1P	H2P	H3P	H4P	H5P	H6P	H7P
●	●	☀	●	●	●	●
●	☀	●	●	●	●	●



- The led indication changes during this operation, but that is not abnormal.
- Please attach the front plate of the outdoor unit in order to prevent electric shocks.

- 5 Measure to be taken when operation finishes abnormally
 1. Confirm the error code on the remote controller.
 2. Correct what is abnormal.
(See the installation manual and operation manual or contact your dealer.)
 3. After the abnormality is corrected, press the **BS3 RETURN** button and reset the error code.
 4. Start the unit again to confirm that the problem is properly solved.
 5. If no error code is indicated on the remote controller, it is possible to start operation after 5 minutes.

Error codes on the remote controller

Installation error	Malfuction code	Remedial action
The stop valve of an outdoor unit is left closed.	E3	Open the stop valve on both the gas and liquid side.
The stop valve of an outdoor unit is left closed.	E4 F3	Open the stop valve on both the gas and liquid side.
Insufficient refrigerant		Check if the additional refrigerant charge has been finished correctly. Recalculate the required amount of refrigerant from the piping length and add an adequate amount of refrigerant.
Refrigerant overcharge	E3 F6	Recalculate the required amount of refrigerant from the piping length and correct the refrigerant charge level by recovering any excessive refrigerant with a refrigerant recovery machine.
Insufficient supply voltage	U2	Check if the supply voltage is supplied properly.
The check operation is not performed.	U3	Perform the check operation.
No power is supplied to the outdoor unit.	U4	Check if the power wiring for the outdoor unit is connected correctly.
Improper type of air handling units are connected.	UR	Check the type of air handling units that are currently connected. If they are not proper, replace them with proper ones.
The stop valve of an outdoor unit is left closed.	UF	Open the stop valve on both the gas and liquid side.
The piping and wiring of the specified air handling unit are not connected correctly to the outdoor unit.		Confirm that the piping and wiring of the specified air handling unit are connected correctly to the outdoor unit.
Incorrect interconnections between units.	UH	Connect correctly the interconnections between units to the F1 and F2 (TO IN/D UNIT) terminals on the PC board in the outdoor unit.
Power supply cables are connected in the reverse phase instead of the normal phase.	UJ	Connect the power supply cables in normal phase. Change any two of the three power supply cables (L1, L2, L3) to correct phase.

12.5. Checks in normal operation

In case of wired remote controllers

- After the check operation, "CHANGE OVER UNDER CONTROL" is blinking in the connected remote controller.
- Select an air handling unit to be used as the master unit.
- Press the operation mode selector button in the remote controller of the air handling unit selected as the master unit.
- In that remote controller, "CHANGE OVER UNDER CONTROL" disappears. That remote controller will control changeover of the cooling/heating operation mode.

12.6. Temperature adjustment operation confirmation

After the test run is over, operate the unit normally. (Heating is not possible if the outdoor temperature is 24°C or higher.)

- Make sure the air handling and outdoor units are operating normally. (If a knocking sound can be heard in the liquid compression of the compressor, stop the unit immediately and then energize the heater for a sufficient length of time before restarting the operation.)
- Check to see if cold (or hot) air is coming out of the air handling unit.



Cautions for normal operation check

- Once stopping, the compressor will not restart in about 5 minutes even if the Run/Stop button of an air handling unit in the same system is pressed.
- When the system operation is stopped by the remote controller, the outdoor units may continue operating for a further 1 minute maximum.
- After the test run, when handling the unit over to the customer, make sure the electric box lid, the service lid and the unit casing are all attached properly.

13. SERVICE MODE OPERATION

After turning on the power supply, the unit can not be started until the H2P initialisation led, indicating that the unit is still under preparation, goes off (maximum 12 minutes).

Vacuuming method

At the first installation, this vacuuming is not required. It is required only for repair purposes.

- 1 When the unit is at a standstill and under the setting mode 2, set the required function B (refrigerant recovery operation/vacuuming operation) to **ON** (ON).
 - After this is set, do not reset the setting mode 2 until the vacuuming is finished.
 - The H1P led is on and the remote controller indicates **TEST** (test operation) and (external control) and the operation will be prohibited.
- 2 Vacuum the system with a vacuum pump.
- 3 Press the **BS1 MODE** button and reset the setting mode 2.

Refrigerant recovery operation method by a refrigerant reclaimer.

- 1 When the unit is at a standstill and in setting mode 2, set the required function B (refrigerant recovery operation/vacuuming operation) to **ON** (ON).
 - The air handling unit and the outdoor unit expansion valves will fully open and some solenoid valves will open.
 - The H1P led is on and the remote controller indicates **TEST** (test operation) and (external control) and the operation will be prohibited.
- 2 Recover the refrigerant using a refrigerant reclaimer. For details, see the operation manual delivered with the refrigerant reclaimer.
- 3 Press the **BS1 MODE** button and reset the setting mode 2.



CAUTION

Never turn the power of the outdoor unit OFF while the refrigerant is being recovered.

If the power is turned OFF, the solenoid valves are closed and the refrigerant cannot be recovered from the outdoor unit.

14. CAUTION FOR REFRIGERANT LEAKS

(Points to note in connection with refrigerant leaks.)

14.1. Introduction

The installer and system specialist shall secure safety against leakage according to local regulations or standards. The following standards may be applicable if local regulations are not available.

The ERQ, like other air conditioning systems, uses R410A as refrigerant. R410A itself is an entirely safe non-toxic, non-combustible refrigerant. Nevertheless care must be taken to ensure that air conditioning facilities are installed in a room which is sufficiently large. This assures that the maximum concentration level of refrigerant gas is not exceeded, in the unlikely event of major leak in the system and this in accordance to the local applicable regulations and standards.

14.2. Maximum concentration level

The maximum charge of refrigerant and the calculation of the maximum concentration of refrigerant is directly related to the humanly occupied space in to which it could leak.

The unit of measurement of the concentration is kg/m^3 (the weight in kg of the refrigerant gas in 1 m^3 volume of the occupied space).

Compliance to the local applicable regulations and standards for the maximum allowable concentration level is required.

According to the appropriate European Standard, the maximum allowed concentration level of refrigerant to a humanly space for R410A is limited to 0.44 kg/m^3 .

Pay special attention to places, such as a basements, etc. where refrigerant can stay, since refrigerant is heavier than air.

14.3. Procedure for checking maximum concentration


Check the maximum concentration level in accordance with steps 1 to 4 below and take whatever action is necessary to comply.

- 1 Calculate the amount of refrigerant (kg) charged to each system separately.


amount of refrigerant in a single unit system (amount of refrigerant with which the system is charged before leaving the factory)	+	additional charging amount (amount of refrigerant added locally in accordance with the length or diameter of the refrigerant piping)	=	total amount of refrigerant (kg) in the system
---	---	--	---	--

- 2 Calculate the smallest room volume (m^3)
In a case such as the following, calculate the volume of (A), (B) as a single room or as the smallest room.

- A. Where there are no smaller room divisions

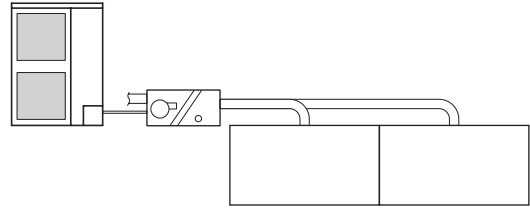

- B. Where there is a room division but there is an opening between the rooms sufficiently large to permit a free flow of air back and forth.

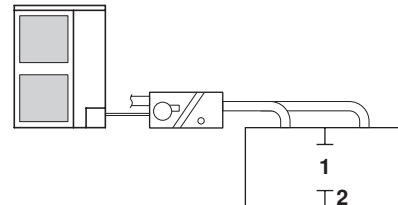

1 opening between rooms

2 partition

(Where there is an opening without a door or where there are openings above and below the door which are each equivalent in size to 0.15% or more of the floor area.)

- 3 Calculating the refrigerant density using the results of the calculations in steps 1 and 2 above.

total volume of
refrigerant in the
refrigerant system

size (m^3) of smallest
room in which there is
an air handling unit
installed

≤ maximum concentration level (kg/m^3)

If the result of the above calculation exceeds the maximum concentration level then make similar calculations for the second then third smallest room and so until the result falls short of the maximum concentration.


- 4 Dealing with the situations where the result exceeds the maximum concentration level.

Where the installation of a facility results in a concentration in excess of the maximum concentration level then it will be necessary to revise the system.


Please consult your supplier.

15. DISPOSAL REQUIREMENTS


Dismantling of the unit, treatment of the refrigerant, of oil and of other parts must be done in accordance with relevant local and national legislation.

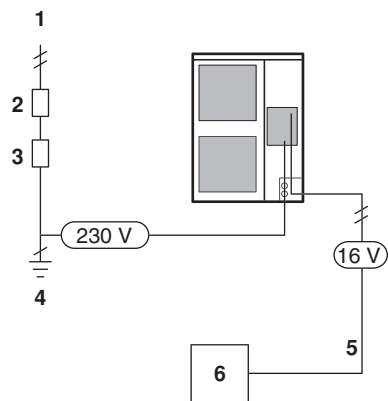



8

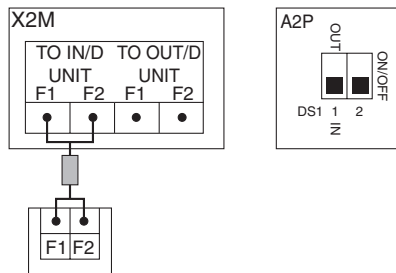


11

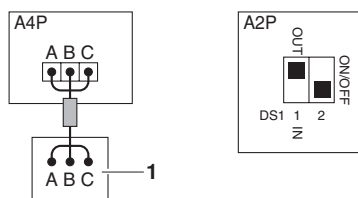


12

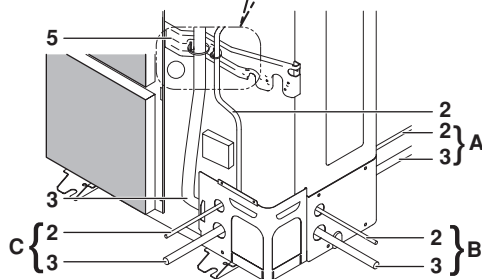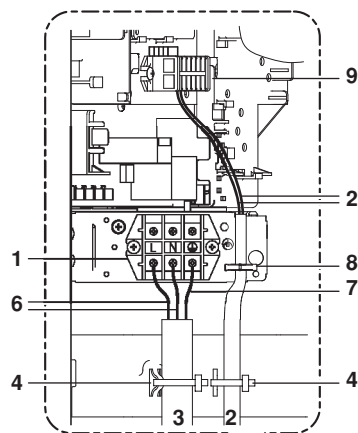






9

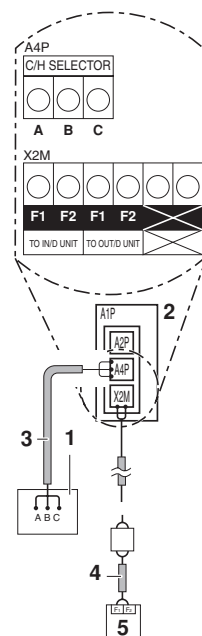

10

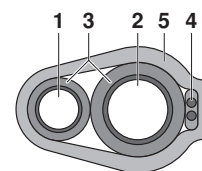

13

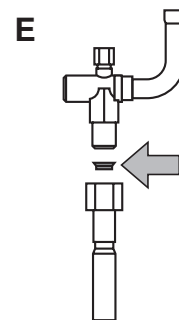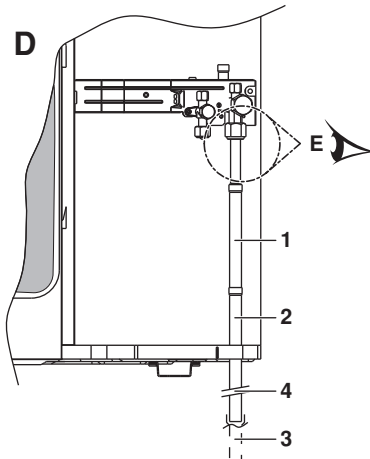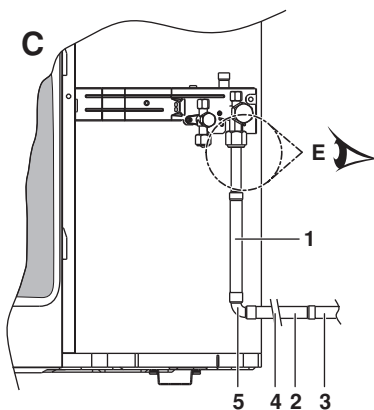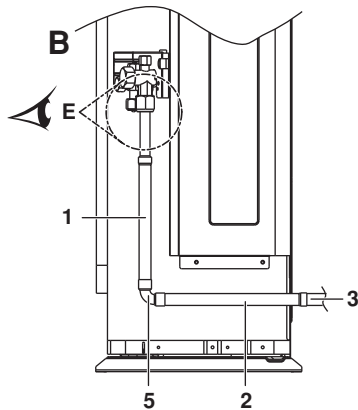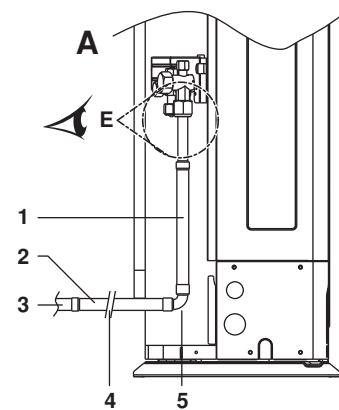

14



4PW51321-1 0000000%

Copyright © Daikin

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

4PW51321-1